



CPX 118OP

DMX CHART

3 Modes 1 - 2 - 5

1 Ch

Channel	Function	Value	Description
1	Dimmer	0 --> 255	0% to 100% Dimmer

2 Ch

Channel	Function	Value	Description
1	Dimmer	0 --> 255	0% to 100% Dimmer 0
2	Strobe	0 --> 255	Hz to 20Hz Strobe

5 Ch

Channel	Function	Value	Description
1	Dimmer	0 --> 255	0% to 100% Dimmer 0
2	Strobe	0 --> 255	Hz to 20Hz Strobe
3	Auto Program	0 --> 8	Safe
		9 --> 50	Macro 1
		51 --> 100	Macro 2
		101 --> 150	Macro 3
		151 --> 200	Macro 4
		201 --> 255	Macro 5
4	Speed	0 --> 255	0% to 100% Speed ID
5	ID	0 --> 255	Address Set