




AYRTON
Digital Lighting

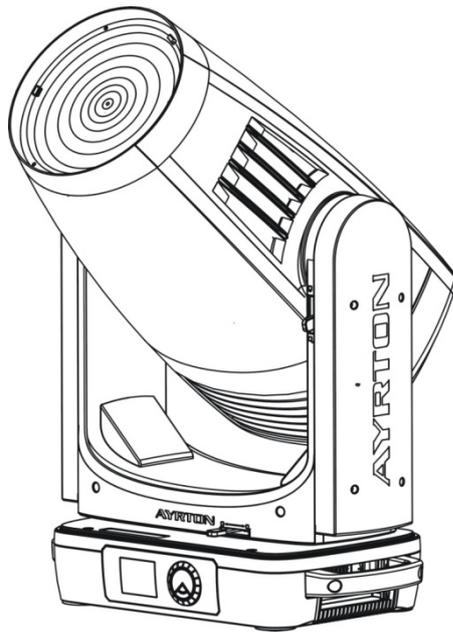

huracán
WASH

User Manual



SCAN FOR
SUPPORT

CONTENTS

1. SAFETY INSTRUCTIONS	2
2. FEATURES	4
3. FIXTURE OVERVIEW	6
4. DIMENSIONAL DRAWINGS	7
5. INSTALLATION INSTRUCTIONS	11
6. DMX-512 CONTROL CONNECTION	14
7. DMX-512 CONNECTION WITH DMX TERMINATOR	14
8. DEVICE DMX START ADDRESS SELECTION	15
9. OPERATING INSTRUCTIONS OF THE INTERNAL DMX WIRELESS SYSTEM	15
10. DISPLAY	16
11. DMX PROTOCOL	36
12. ERROR MESSAGES	43
13. CLEANING AND MAINTENANCE	46

1. SAFETY INSTRUCTIONS

1.1. IMPORTANT SAFETY WARNING

This device has left the factory in perfect condition. In order to maintain this condition and to ensure safe operation, it is absolutely necessary for the user to follow the safety instructions and warning notes written in this user manual.

In order to install, operate, and maintain the lighting fixture safely and correctly we suggest that the installation and operation be carried out by qualified technicians and these instructions be carefully followed.

	CAUTION! HIGH VOLTAGE. RISK OF SEVERE OR FATAL ELECTRIC SHOCK
---	---

	CAUTION! ALWAYS DISCONNECT MAINS SUPPLY BEFORE REMOVING ANY FIXTURE COVERS
---	--

	CAUTION! NEVER LOOK DIRECTLY INTO THE LIGHT SOURCE. SENSITIVE PERSONS MAY SUFFER AN EPILEPTIC SHOCK
---	---

	CAUTION! NEVER TOUCH THE DEVICE DURING OPERATION! COVERS MAY BE HOT
---	---

	CAUTION! WARNING: CHANGES OR MODIFICATIONS TO THIS UNIT NOT EXPRESSLY APPROVED BY THE PARTY RESPONSIBLE FOR COMPLIANCE COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT. NOTE: THIS EQUIPMENT HAS BEEN TESTED AND FOUND TO COMPLY WITH THE LIMITS FOR A CLASS A DIGITAL DEVICE, PURSUANT TO PART 15 OF THE FCC RULES. THESE LIMITS ARE DESIGNED TO PROVIDE REASONABLE PROTECTION AGAINST HARMFUL INTERFERENCE WHEN THE EQUIPMENT IS OPERATED IN A COMMERCIAL ENVIRONMENT. THIS EQUIPMENT GENERATES, USES AND CAN RADIATE RADIO FREQUENCY ENERGY AND, IF NOT INSTALLED AND USED IN ACCORDANCE WITH THE INSTRUCTION MANUAL, MAY CAUSE HARMFUL INTERFERENCE TO RADIO COMMUNICATIONS. OPERATION OF THIS EQUIPMENT IN A RESIDENTIAL AREA IS LIKELY TO CAUSE HARMFUL INTERFERENCE IN WHICH CASE THE USER WILL BE REQUIRED TO CORRECT THE INTERFERENCE AT HIS OWN EXPENSE.
---	--

Important:

Damage caused by the disregard of this user manual is not subject to warranty. The dealer and manufacturer will not accept liability for any resulting defects or problems.

- If the device has been exposed to temperature changes due to environmental conditions, do not power on immediately. The resulting condensation could damage the device. Leave the device powered off until it has reached room temperature.
- This device falls under protection-class I. Therefore, it is essential that the device be earthed.

- If either lenses or display are damaged (damage may include cracks or gashes in the material) they must be replaced.
- Electrical connections, such as replacing the power plug, must be performed by a qualified person.
- Make sure that the available voltage is not higher than that which is stated in this manual.
- Make sure the power cord is never crushed or damaged by sharp edges. If this should be the case, replacement of the cable must be done by an authorized dealer.
- If the external flexible power cord of this device is damaged, it shall be exclusively replaced by the manufacturer or their service agent or a similar qualified person in order to avoid injury.
- When the device is not in use or before performing maintenance, always disconnect the device from the mains. Only handle the power cord from the plug. Never pull the plug out of a socket by tugging the power cord.
- When powered on for the first time, some smoke or smell may occur. This is caused by coating on metal parts when heated and is normal. If you are concerned, please contact your distributor.
- Do not focus the beam onto flammable surfaces. The minimum distance between the exiting lens of the device and the illuminated surface must be greater than 3 meter.

Please be aware that damage caused by any modifications to the device are not subject to warranty. Keep away from children and non-professionals.

1.2. GENERAL GUIDELINES

- This device is a lighting effect for professional use on stages, in discotheques, theatres, etc. the device was designed for indoor use.
- This fixture is only allowed to be operated within the maximum alternating current as stated in the technical specifications in section 2 of this manual.
- Handle the device with care, avoid shaking or using force when installing or maintaining the device.
- If you use the quick lock cam when rigging the device, make sure the quick lock fasteners are located in the quick lock holes correctly and securely.
- Operate the device only after having familiarized yourself with its functions. Do not permit operation by persons not qualified for operating the device. Most damage is the result of unprofessional operation.
- Please use the original packaging if the device is to be transported.
- The applicable temperature for the device is between -10°C to 45°C. Do not use the device outside of this temperature range.
- The light source of this luminaire is not replaceable; when the light source reaches its end of life the whole luminaire shall be replaced.

For safety reasons, please be aware that all modifications to the device are forbidden. If this device is operated in any way different to the ones described in this manual, the product may suffer damage and the warranty becomes void. Furthermore, any other operation may lead to short-circuits, burns, electric shocks etc.

2. FEATURES

POWER SUPPLY

- AC120-240V~, 50/60Hz
- Power Consumption: 1600W

LIGHT SOURCE

- LED: White 1050W LED, 8000±400K Color Temperature @ S
White 1050W LED, 6800±400K Color Temperature @ TC
White 1050W LED, 6300±300K Color Temperature @ ST
- Extremely long Life: >20,000H

MOVEMENT

- Pan movement: 540° /630° Optional (16 bit)
- Tilt movement: 270° (16 bit)
- Advanced moving system: fast, stable and quite, auto x-y repositioning

COLORS

- CMY+CTO+CTB+CTP color mixing, uniform, linear and speed can be adjustable
- 1 Color wheel: 6 dichroic filters + open, indexable, rainbow effect

GOBOS

- 1 Rotating gobo wheel: 7 interchangeable, rotating, and indexable, gobo+open
- "Slot in & out" gobo wheel system

FEATURES

- 3 Control channel modes: 39/37/61 channels
- 2 Operation modes: DMX-512, Master / Slave mode
- Strobe effect with 1-25 flashes per second and pulse effect
- Rotating prism: 5-Facet Prism
- Animation wheel: can make special dynamic effect
- Focus: Motorized focus
- Blade System
- Stepless frost: 0%~100% linear change frost
- Stepless iris: 5%~100% linear change iris, pulse iris effect
- Dimmer: 0%~100% full range dimming

DISPLAY

- Advanced and convenient full –color LCD
- Can be changed 180° reverse to fit for different installation position

SOFTWARE

- Upgrades: fast and convenient through DMX cable with DMX-512 controller
- Reset DMX address, remote lamp control, reset can all be done by the DMX controller
- Running time of fixture on display for reference

OTHER SPEC


- Input signal isolation: guarantees stable signal transmission without interference

- Advanced RDM function


WEIGHT

- Net weight: 42.1 kg

3. FIXTURE OVERVIEW

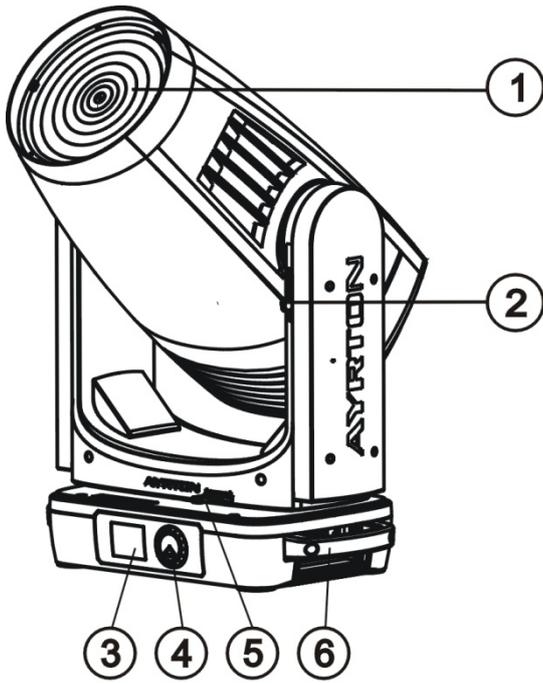





- 1) Lenses Assembly
- 2) Tilt Lock
- 3) Display
- 4) Clicking Jog Wheel
- 5) Pan Lock
- 6) Handle

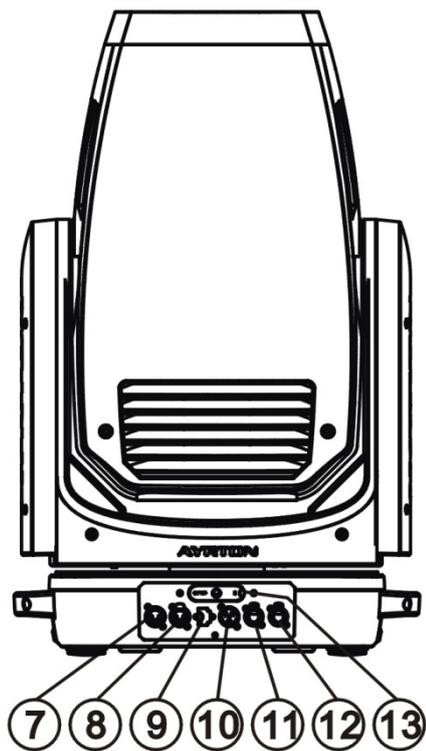


- 7) DMX Out
- 8) DMX In
- 9) USB
- 10) Power In
- 11) RJ45 Out
- 12) RJ45 In
- 13) Battery

4. DIMENSIONAL DRAWINGS


4.1. Fixture Dimension

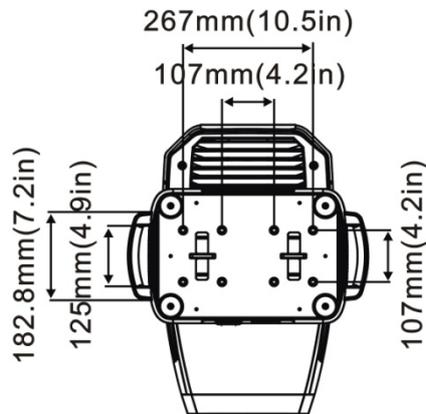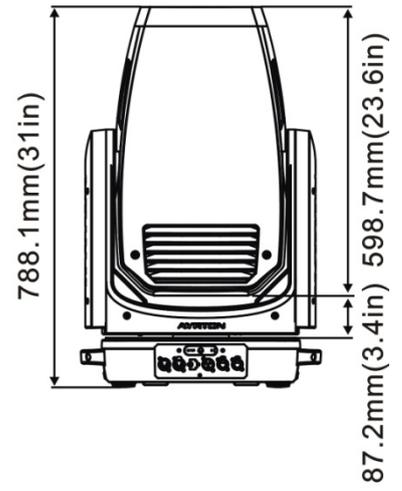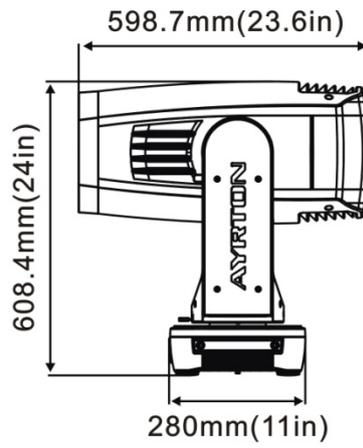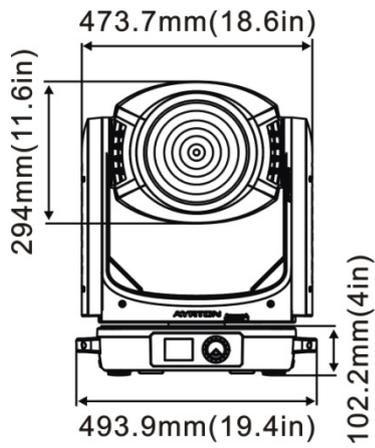

4.2. Color Filter Dimension

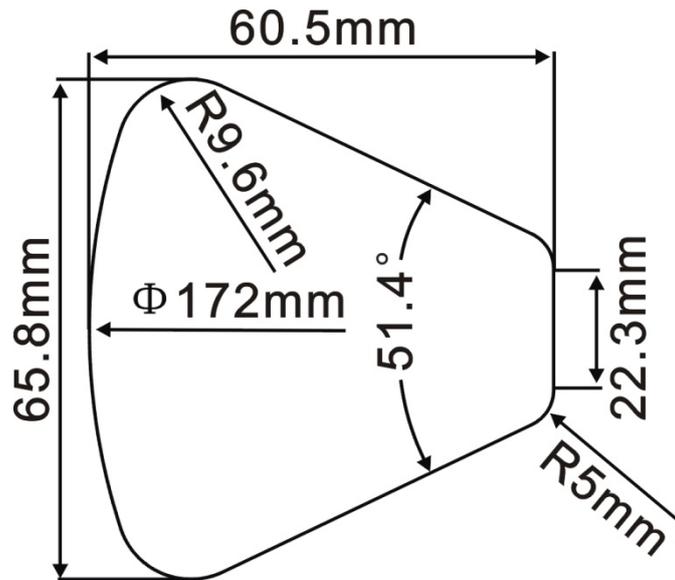


1. CTB1/4
(6.03.05.03.2864)
2. Congo Blue
(6.03.05.03.2855)
3. Green
(6.03.05.03.2856)
4. Orange
(6.03.05.03.2857)
5. Blue
(6.03.05.03.2858)
6. Red
(6.03.05.03.2859)

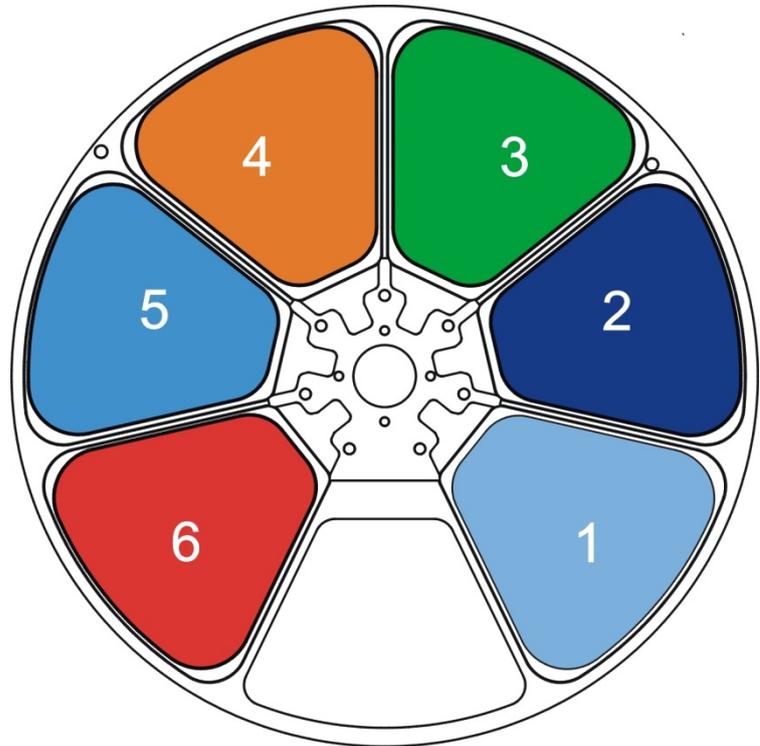


4.3. Rotating Gobo Filter Dimension

Rotating Gobo:

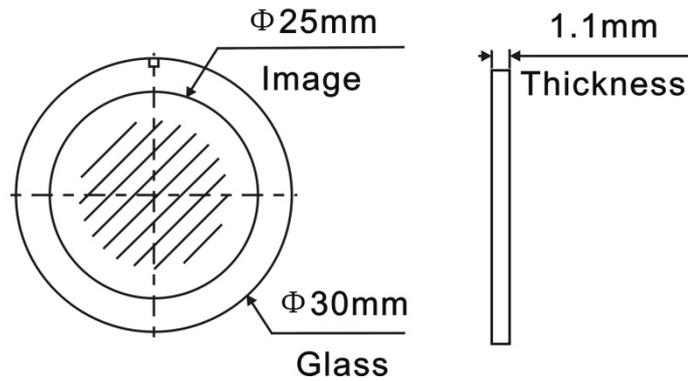


Rotating Gobo:

1. 314 – Dot Line 4
(6.03.03.01.2261)
2. 322 – Dot Ring 8
(6.03.03. 01. 2262)
3. 326 – Dot Triangle 3
(6.03.03. 01. 2268)
4. 332 – Square Beam 4
(6.03.03. 01. 2264)
5. 310 – Eccentric Dot
(6.03.03. 01. 1573)
6. 342 – Five Spokes
(6.03.03. 01. 2266)
7. 347 Beam Shaper
(6.03.03. 01. 2267)

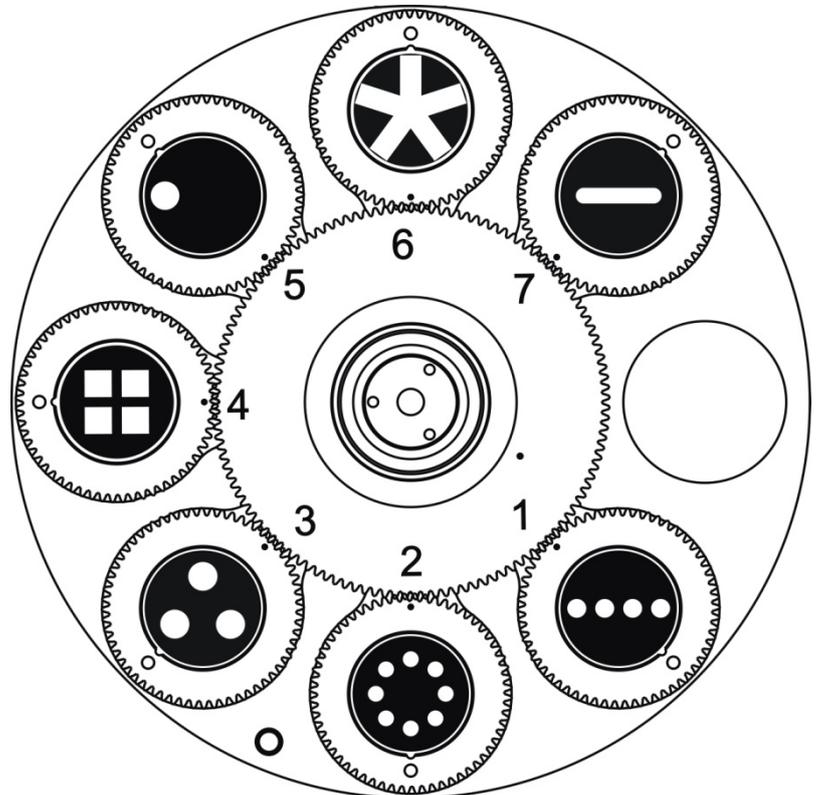

4.4. Animation Filter Dimension

Color Animation:

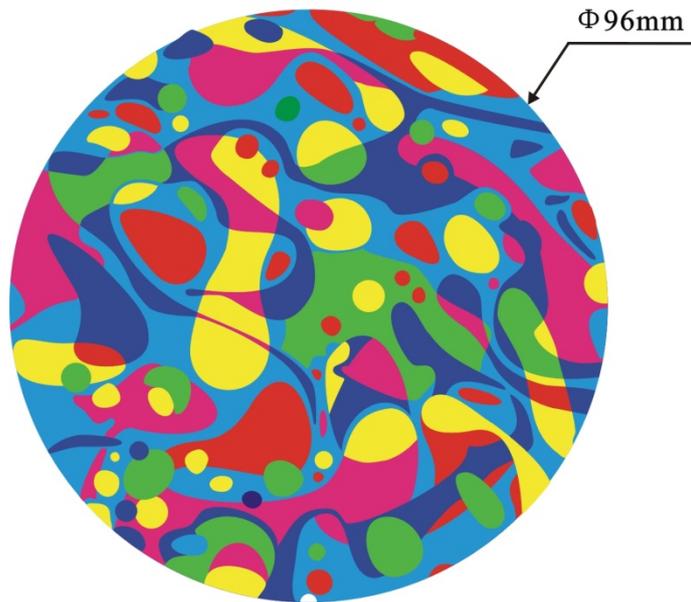

5. INSTALLATION INSTRUCTIONS

5.1. Rigging the device




CAUTION!

PLEASE CONSIDER THE RESPECTIVE NATIONAL NORMS DURING INSTALLATION. THE INSTALLATION MUST ONLY BE CARRIED OUT BY A QUALIFIED PERSON.

- The applicable temperature for the lighting is between -10°C to 45°C . Do not use the lighting under or above this temperature range.
- The installation of the fixture has to be built and constructed in a way that it can hold 10 times the weight for 1 hour without any harming deformation.
- The installation must always be secured with a secondary safety attachment, e.g. an appropriate safety rope.
- Never stand directly below the device when mounting, removing or servicing the fixture.
- The operator has to make sure the safety relating and machine technical installations are approved by an expert before taking the device into operation for the first time.
- These installations have to be approved by a skilled person once a year.
- Overhead mounting requires extensive experience, including amongst others calculating working load limits, installation material being used, and periodic safety inspection of all installation material and the device. If you lack these qualifications, do not attempt the installation yourself. Improper installation can result in bodily injury.

5.2. Rigging using the omega brackets

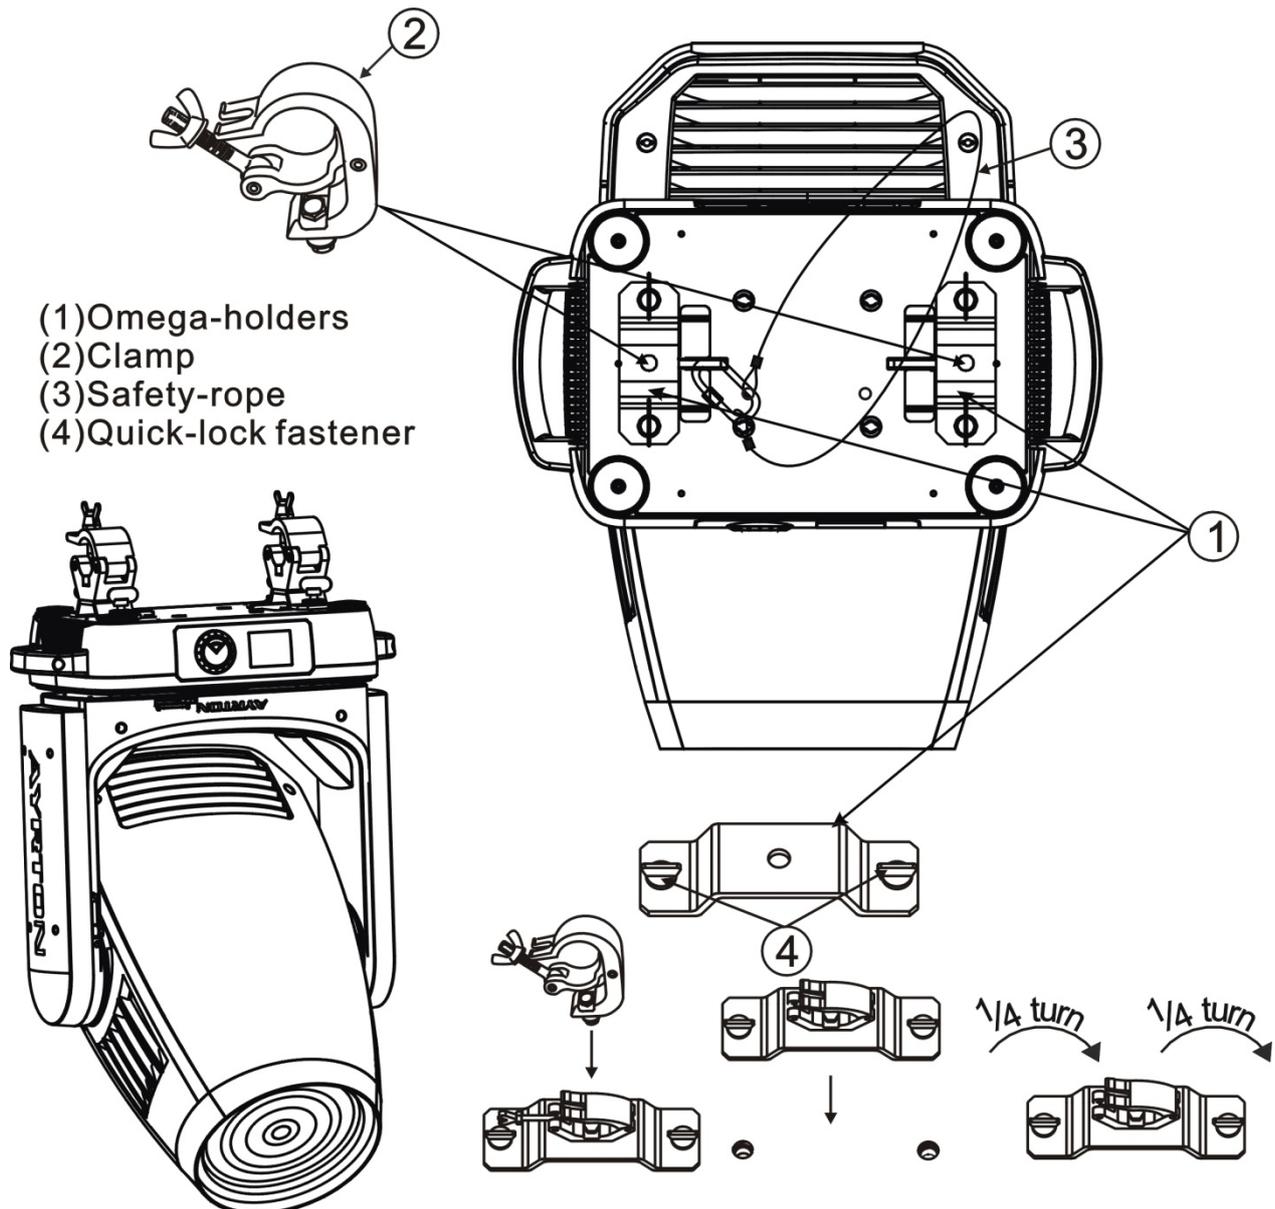


- Fix the clamp to the bracket by tightening the M12 nut and bolt to the bracket through the $\Phi 13$ hole in the middle of the bracket.
- Insert the quick-lock fasteners of the first Omega holder into the respective holes on the bottom of the device. Tighten the quick-lock fasteners fully clockwise.
- Install the second Omega holder.
- Pull the safety cable through the holes on the bottom of the base and over the trussing system or another suitable rigging point. Insert the end into the carabiner and tighten the safety screw.

Important:

This step is very important to ensure safe rigging of the fixture.

5.3. RIGGING DRAWINGS

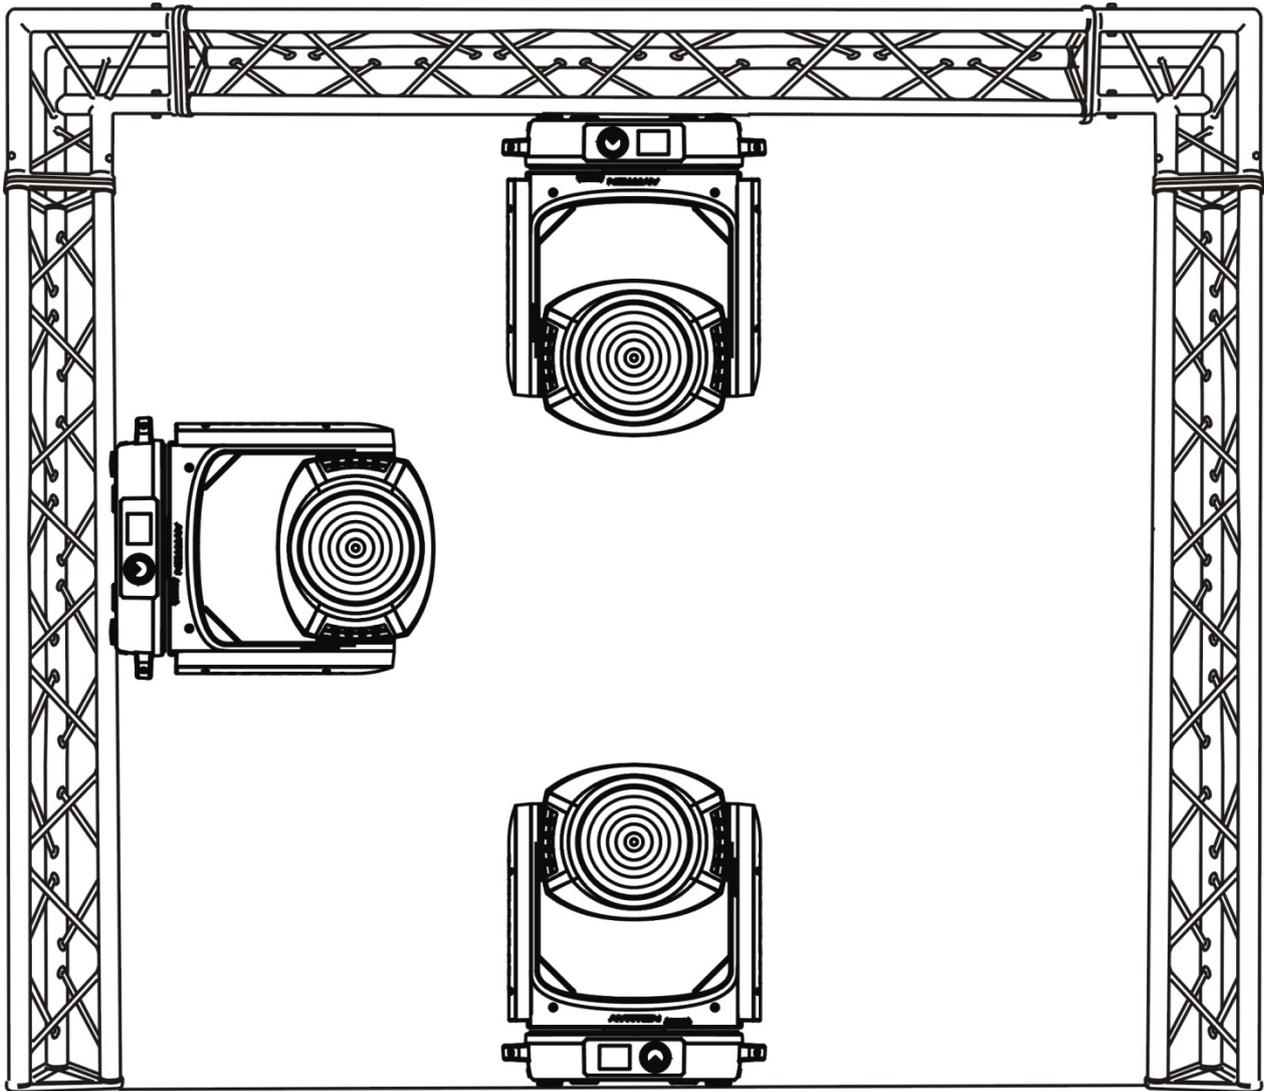



- Be sure this fixture is kept at least 0.1 m away from any flammable materials (decoration etc.).
- Always use and install the supplied safety cable as a safety measure to prevent accidental damage and/or injury in the event the clamp fails.

Important:

Overhead rigging requires extensive experience , including (but not limited to) calculating working load limits, specifying installation/ rigging materials, and periodic safety inspection of all installation material as well as the device.If you lack these qualifications, do not attempt the rigging of this device yourself.Improper installation/ rigging can result in serious bodily injury.


6. DMX-512 CONTROL CONNECTION

Connect the provided male side of the XLR cable to the female XLR output of your controller and the female side of the XLR cable to the male XLR input of the device. You can connect multiple devices together in a serial fashion. The cable needed should be two core, screened cable with XLR input and output connectors. Please refer to the diagram below.

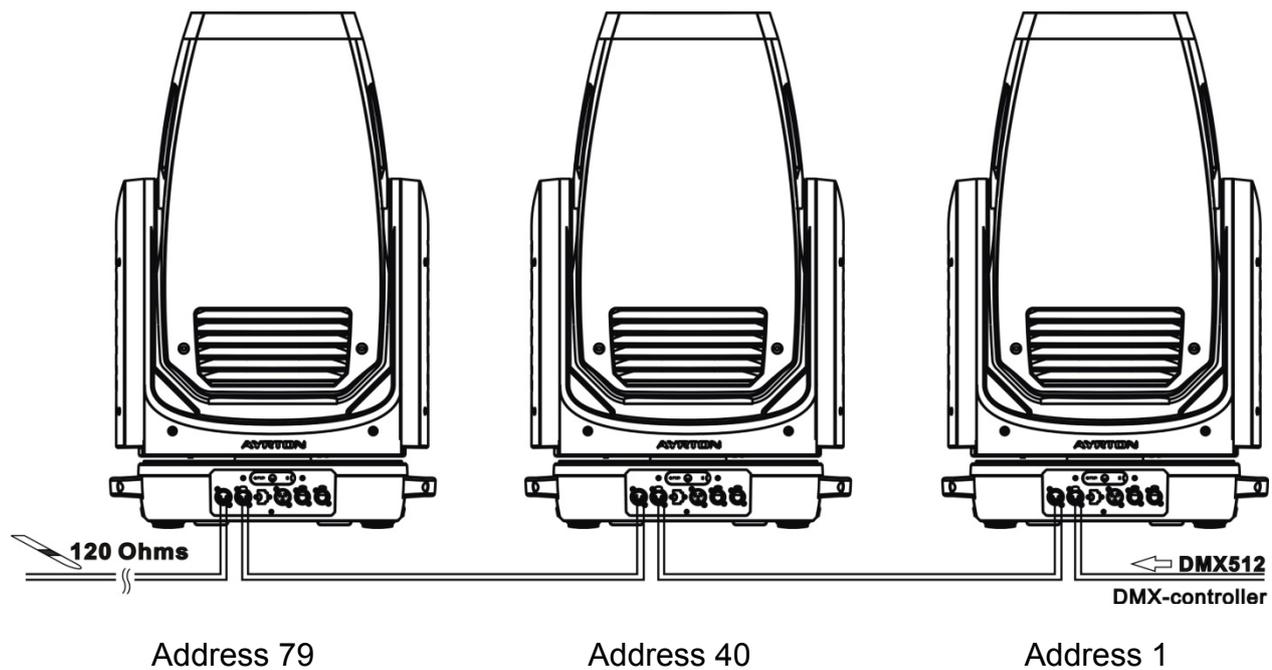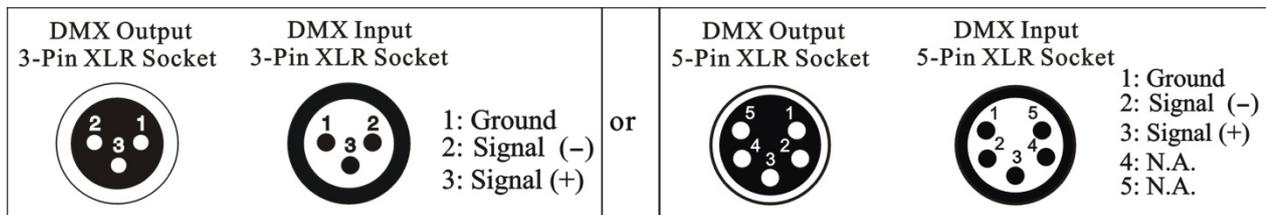

7. DMX-512 CONNECTION WITH DMX TERMINATOR

For installations where the DMX cable has to run over a long distance or is in an electrically noisy environment, such as in a discotheque, it is recommended to use a DMX terminator. This helps in preventing corruption of the digital control signal caused by electrical noise. The DMX terminator is an XLR plug with a 120 Ω resistor connected between pins 2 and 3, which is then plugged into the output (female) XLR socket of the last fixture in the chain. Please see illustrations below.

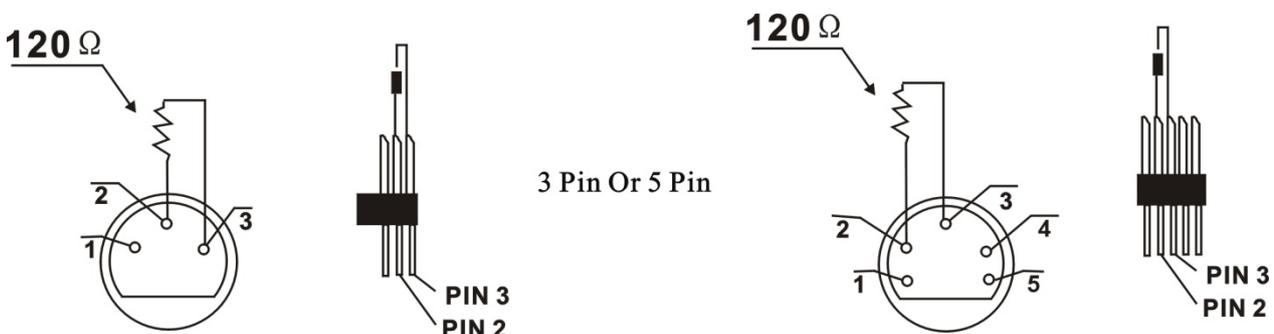

8. DEVICE DMX START ADDRESS SELECTION

All fixtures should be given a DMX starting address when using a DMX signal, so that the correct fixture responds to the correct control signals. This digital starting address is the channel number from which the fixture starts to “listen” to the digital control information sent out from the DMX controller. The allocation of this starting address is achieved by setting the correct address number on the display located on the base of the device.

You can set the same starting address for all fixtures or a group of fixtures, or set different addresses for each fixture individually.

If you set the same address on all devices, all the devices will start to “listen” to the same control signal from the same channel number. In other words, changing the settings of one channel will affect all the fixtures simultaneously.

If you set a different address, each unit will start to “listen” to the channel number you have set, based on the quantity of control channels of the unit. That means changing the settings of one channel will affect only the selected device.

In the case of the LED moving head, in 39 channel mode, you should set the starting address of the first unit to 1, the second unit to 40 (39 + 1), the third unit to 79 (39+ 40), and so on.

9. OPERATING INSTRUCTIONS OF THE INTERNAL DMX WIRELESS SYSTEM

9.1 Equipments:

DMX 512 controller, wireless transmitter, and the fixtures with wireless receiver.

9.2 Message from the LED indicator:

- 1) Rapid flashing red/Green: logging in to a transmitter.
- 2) Slow flashing Red/Green: Logged on a transmitter and the DMX line is idle (No DMX is connected to transmitter) .
- 3) Solid Green: Logged on to a transmitter and receiving DMX data.
- 4) Solid Red: Not logged on to a transmitter (free) .

9.3 WDMX in the menu of the fixture:

On a fixture installed with wireless system, in order to switch between wireless control system and traditional DMX control (with cable) , a new menu WDMX is added to the display board.

ON: (Activate WDMX)

1) When the fixture is on power, and the WDMX is activated to ON status, but did not connect to the controller and did not log in to the transmitter, the fixture will search for the DMX signal source. If the fixture is connected to the DMX controller it can be controlled by DMX controller; if it is log in to the wireless transmitter, it can be controlled by the Transmitter.

2) When the fixture is power off, and the WDMX is in ON status, if the fixture is connected to DMX controller. After the fixture is power on, it can be controlled only by the DMX controller which connected. The fixture can log in the wireless transmitter, and receive only radio signal from transmitter, but not DMX from the transmitter.

OFF: (De-activate WDMX)

In this status, wireless system is not activated, so the fixture can not log in the transmitter.

REST: (reset WDMX memory)

Can remove the fixture from the connection with the transmitter, the fixture become free and ready to log in any transmitter.

9.4 Setup the wireless system:

- 1) Connect the transmitter with the DMX controller.
- 2) To make the fixture installed with wireless receiver log in to the transmitter.
 - a) Initially, the indicator on the receiver fixture should be in Solid red.
 - b) Press and hold the configuration button on transmitter for less than 3 seconds the red/green LEDs on the transmitter and the receiver fixture will flash rapidly for about 5~10 seconds while the system goes through its setup procedure.
 - c) Once the receiver fixture is logged in to the transmitter (T1), the fixture with wireless receiver will keep the memory, even if restart the power, this unit will log in the transmitter (T1) automatically.
- 3) Use the DMX 512 to control the fixture

9.5 Remove the receivers from transmitter(T1)and to log in to another transmitter(T2):

Case 1: Remove a receiver:

- a) On the control board of the fixture, enter menu to activated the function of REST;
- b) The LED for wireless on the fixture should turn to Solid red; the receiver can log out from the transmitter (T1) ;
- c) press the configuration button on transmitter (T2) for less than 3 second, then the fixture will start to connect with the transmitter (T2) .

Case 2: Remove all receivers from a transmitter (T1) to log in to T2:

- a) Press and hold the configuration button on the T1 as least 5 seconds, can clear the connection with all the fixtures;
- b) All the red/green LEDs on the receiver fixtures will turn to Solid red to indicate that the receivers are unassigned and removed from the transmitter (T1) ;
- c) Press and hold the configuration button on the T2 less then less than 3 second, the fixtures will connect with the T2.

PS:

1. Please log the receivers out from the transmitter after every job, so that the receivers are in free un assigned state and ready to be assigned to a transmitter.
2. Do not connect the fixture which is under the communication of wireless system to the DMX controller, otherwise it will cause interference from the DMX controller.

10. DISPLAY

The Display offers Jog Wheel features: you can set the starting address, run the pre-programmed program or reset the device.

The main menu is accessed by double clicking the Jog Wheel. Browse through the menu by turning Jog Wheel clockwise or counterclockwise.

Double clicking in order to select the desired menu or long pressing to exit menu, double click

the Jog wheel for confirm. After accessing the edit mode, the unit will automatically exit to the main menu after 15 seconds from the last button press. Clockwise is positive direction while counterclockwise is opposite direction.

When the unit is powered on, if no data signal is connected after 1 minute, then the display will switch off automatically. The Display does not need external power to operate in case there is battery, hold down the Jog Wheel for 6 seconds and the Display will turn on by using the unit's battery.

PS: No response when quick press the Jog Wheel.

	CAUTION! THE BATTERY MUST BE A LI-ION RECHARGEABLE BATTERY, THE SPECIFICATION IS AS FOLLOWING:	 Li-ion Rechargeable Battery ICR 14500 3.7V
---	--	--

To install the battery for the first time, please make sure the unit is not connected to AC power. Install the battery in the battery holder, then remove the battery and install it back. This procedure must be done only for the first battery installation.

Default settings shaded

Address	Address	DMX address:001-XXX :	DMX address setting
Mode	User Mode	Stand Mode Basic Mode Extend Mode User Mode A User Mode B User Mode C	User's mode to change channel numbers
	Edit User ModeA :	Max channel PAN :	Preset User modes A,B,C :
Options	Status	No DMX Mode Pan Reverse Tilt Reverse Pan Degree Feedback Init PAN Init TILT Reset Mode Pan/Tilt Spd CMY Spd Zoom/Focus Spd Reset LED Fade Hibernation DMX Output	Auto run if no DMX Pan Reverse movement Tilt Reverse movement Pan Degree Select Movement Feedback Init PAN Init TILT Reset Mode Movement Speed CMY Spd Zoom/Focus Spd Reset LED Fade Stand by Mode Art-Net to DMX

Service PIN	Service PIN Set Ip Set Mask Ip DHCP Cross Load SW USB Update Clr LED Timer Clr Error Info	Password=XXX xxx.xxx.xxx.xxx xxx.xxx.xxx.xxx ON/OFF ON/OFF ON/OFF ON/OFF ON/OFF	Service Password"=050" Set Ip Set Mask Ip DHCP Cross Load SW USB Update Clr LED Timer Clr Error Info
Fans Control	Fans Speed	Auto Stage Silence Super Silence	Fans Speed select
	Constant Fans	ON/OFF	Constant Fans
Disp.Setting	Shutoff Time Flip Display Key Lock DispFlash	02~60m 05m ON/OFF ON/OFF ON/OFF	Display shutoff time Reverse 180 degree Key Lock DispFlash
Signal Select	DMX WDMX Art—Net sACN		DMX WDMX Art-Net sACN
Temp. C/F	Celsius Fahrenheit		Temperature switch between °C/°F
Initial Pos.	PAN =XXX		Initial effect position
Wireless DMX	Activate WDMX Rest WDMX		Activate WDMX Rest WDMX
Dim Curve	Square Law Linear		Dim Curve
Refresh Select	1.2K 2.4K 16K 25K		Refresh Select
Gobo Correction	ON/OFF		Gobo Correction
Reset P/T Fade	ON/OFF		Reset P/T Fade
Frost (Progressive)	ON/OFF		Frost (Progressive)
Silence Movem.	ON/OFF		Silence Movem.
Trigger	DMX Value Disp. Set To Slave Auto Program	PAN..... Slave1,Slave2,Slave3 Master / Alone	DMX Value Disp. Set To Slave Auto Program
ResetDefault	ON/OFF		Restore factory set.
Reset User	Address	DMX address:001-XXX :	DMX address setting

		Mode	Stand Mode Basic Mode Extend Mode User Mode A User Mode B User Mode C	User's mode to change channel numbers
		Fans Speed	Auto Stage Silence Super Silence	Fans Speed select
		Constant Fans	ON/OFF	Constant Fans
Info	Time Info.	Current Time Ttl Life Hrs Last Run Hrs LED Hours Timer PIN Clr Last Run		XXXX(Hours) XXXX(Hours) XXXX(Hours) XXXX(Hours) Password=XXX ON/OFF
	Temp. Info	XXX°C/°F		
	Fan Info.	xxxxRPM		Fan information
	Software Ver	V1.0.....		Software version
	Network	IP,Mask,Mac		Network
	Error Info.	Error Record 1 :		Error Information
Test	Home	All Pan&Tilt Color Gobo Other		Reset All Reset Pan&Tilt Reset Color Reset Gobo Reset Others
	Test Channel	PAN		Test function
	Manual Ctrl.	PAN =XXX :		Fine adjustment of the lamp
	Calibration	-Password- PAN :		Password "050" Calbrate and adjust the effects to standard/right position
	Gobo Replace	Gobo Wheel 1		Gobo Replace
Preset	Select Prog.	Prog. Part 1 = Program 1 ~ 10 Prog. Part 2 = Program 1 ~ 10 Prog. Part 3 = Program 1 ~ 10	Program 1 Program 2 Program 3	Select programs to be run
	Edit Prog.	Program 1 : Program 10	Program Test Step 01=SCxxx Step 64=SCxxx	Testing program Program in loop Save and exit

	Edit Scenes	Edit Scene 001 ~ Edit Scene 250	Pan,Tilt,..... --Fade Time-- --Secne Time-- Input By Outside	Save and automatically return manual scenes edit
	Scenes Input	XX~XX		Scenes Input

10.1. Address

19.1.1. Set DMX Address

With this function, you can adjust the desired DMX-address via the Display.

1. Double click the Jog Wheel to access main menu.
2. The display will show“ADDRESS”.
3. Double click the Jog Wheel then display“Address”.
4. Turn the Jog Wheel clockwise then display“001~XXX”.
5. Long press 2 seconds the Jog Wheel to back to last menu – “Set DMX Address”, then back to main menu by long press again.

10.2. Mode

19.2.1. User Mode

With this function, you can create user defined channel orders.

1. Double click the Jog Wheel to access main menu, turn the Jog Wheel clockwise to display“USERS MODE”.
2. Double click the Jog Wheel to edit.
3. Turn the Jog Wheel clockwise to display“User mode”, Double click the Jog Wheel to edit.
4. When in“Extend Mode”, turn the Jog Wheel to select“Basic mode”, “Stand Mode”, “User Mode A”, “User Mode B”and“User Mode C”.
5. Long press 2 seconds the Jog Wheel to back to last menu –“User Mode”, then back to main menu by long press again.

19.2.2. Edit User Mode

With this function, you can adjust the rest user defined channel order.

1. Double click the Jog Wheel to access“USERS MODE”menu, turn the Jog Wheel until display“Edit User”.
2. Double click the Jog Wheel to access“Edit User”menu.
3. Set up“Max Channel=xxx”and select channel value.
4. Set up“Mode B”and“Mode C”by the same way.
5. Long press 2 seconds the Jog Wheel to back to last menu – “Edit User”, then back to main menu by long press again.

10.3. Options

19.3.1. Status

No DMX Mode

With this function, when the drive is not DMX signal, it runs automatism, close, hold and music, the default is hold.

1. Double click the Jog Wheel to access main menu.
2. Turn the Jog Wheel clockwise then display“Options”.
3. Double click the Jog Wheel to access“Options”, turn the Jog Wheel to select “Status”.
4. Double click the Jog Wheel to access“Status”menu, The display will show“No DMX Mode”.

5. Double click the Jog Wheel to access “No DMX Mode”, The display will show “Hold”, Turn the Jog Wheel to select “Close”, “Auto”.
6. Long press 2 seconds the Jog Wheel to back to last menu – “Status”, then back to main menu by long press again.

Pan Reverse

With this function you can reverse the Pan-movement.

1. Double click the Jog Wheel to access main menu.
2. Turn the Jog Wheel clockwise then display “Options”.
3. Double click the Jog Wheel to access “Options”, turn the Jog Wheel to select “Status”.
4. Double click the Jog Wheel to access “Status” menu, The display will show “Pan Reverse”.
5. Double click the Jog Wheel to access “Pan Reverse”, The display will show “OFF”, Turn the Jog Wheel to select “NO”.
6. Long press 2 seconds the Jog Wheel to back to last menu – “Status”, then back to main menu by long press again.

Tilt Reverse

With this function you can reverse the Tilt-movement.

1. Double click the Jog Wheel to access main menu.
2. Turn the Jog Wheel clockwise then display “Options”.
3. Double click the Jog Wheel to access “Options”, turn the Jog Wheel to select “Status”.
4. Double click the Jog Wheel to access “Status” menu, The display will show “Tilt Reverse”.
5. Double click the Jog Wheel to access “Tilt Reverse”, The display will show “OFF”, Turn the Jog Wheel to select “NO”.
6. Long press 2 seconds the Jog Wheel to back to last menu – “Status”, then back to main menu by long press again.

Pan Degree

With this function, you can select pan degree for 630 or 540.

1. Double click the Jog Wheel to access main menu.
2. Turn the Jog Wheel clockwise then display “Options”.
3. Double click the Jog Wheel to access “Options”, turn the Jog Wheel to select “Status”.
4. Double click the Jog Wheel to access “Status” menu, The display will show “Pan Degree”.
5. Double click the Jog Wheel to access “Pan Degree”, The display will show “540”, Turn the Jog Wheel to select “630”.
6. Long press 2 seconds the Jog Wheel to back to last menu – “Status”, then back to main menu by long press again.

Feedback

With this function, you can feedback switch of pan movement or tilt movement.

1. Double click the Jog Wheel to access main menu.
2. Turn the Jog Wheel clockwise then display “Options”.
3. Double click the Jog Wheel to access “Options”, turn the Jog Wheel to select “Status”.
4. Double click the Jog Wheel to access “Status” menu, The display will show “Feedback”.
5. Double click the Jog Wheel to access “Feedback”, The display will show “ON”, Turn the Jog Wheel to select “OFF”.
6. Long press 2 seconds the Jog Wheel to back to last menu – “Status”, then back to main menu by long press again.

Init PAN

1. Double click the Jog Wheel to access main menu.
2. Turn the Jog Wheel clockwise then display“Options”.
3. Double click the Jog Wheel to access“Options”, turn the Jog Wheel to select “Status”.
4. Double click the Jog Wheel to access“Status”menu, The display will show“Init PAN”.
5. Double click the Jog Wheel to access“Init PAN”, The display will show “ON”, Turn the Jog Wheel to select“OFF”.
6. Long press 2 seconds the Jog Wheel to back to last menu –“Status”, then back to main menu by long press again.

Init TILT

1. Double click the Jog Wheel to access main menu.
2. Turn the Jog Wheel clockwise then display“Options”.
3. Double click the Jog Wheel to access“Options”, turn the Jog Wheel to select “Status”.
4. Double click the Jog Wheel to access“Status”menu, The display will show“Init TILT”.
5. Double click the Jog Wheel to access“Init TILT”, The display will show “ON”, Turn the Jog Wheel to select“OFF”.
6. Long press 2 seconds the Jog Wheel to back to last menu –“Status”, then back to main menu by long press again.

Reset Mode

1. Double click the Jog Wheel to access main menu.
2. Turn the Jog Wheel clockwise then display“Options”.
3. Double click the Jog Wheel to access“Options”, turn the Jog Wheel to select “Status”.
4. Double click the Jog Wheel to access“Status”menu, The display will show“Reset Mode”.
5. Double click the Jog Wheel to access“Reset Mode”, The display will show “Fast”, Turn the Jog Wheel to select“All Rot Gobos”.
6. Long press 2 seconds the Jog Wheel to back to last menu –“Status”, then back to main menu by long press again.

Pan/Tilt Spd

With this function, you can select scan mode from“Fast”, “Medium”, “Slow”.

1. Double click the Jog Wheel to access main menu.
2. Turn the Jog Wheel clockwise then display“Options”.
3. Double click the Jog Wheel to access“Options”, turn the Jog Wheel to select “Status”.
4. Double click the Jog Wheel to access“Status”menu, The display will show“Pan/Tilt Spd”.
5. Double click the Jog Wheel to access“Pan/Tilt Spd”, The display will show “Fast”, Turn the Jog Wheel to select“Fast”, “Medium”, “Slow”.
6. Long press 2 seconds the Jog Wheel to back to last menu –“Status”, then back to main menu by long press again.

CMY Spd

With this function, you can select CMY speed from“Fast”, “Medium”, “Slow”.

1. Double click the Jog Wheel to access main menu.
2. Turn the Jog Wheel clockwise then display“Options”.
3. Double click the Jog Wheel to access“Options”, turn the Jog Wheel to select “Status”.
4. Double click the Jog Wheel to access“Status”menu, The display will show“CMY Spd”.
5. Double click the Jog Wheel to access“CMY Spd”, The display will show “Fast”, Turn the Jog Wheel to select“Fast”, “Medium”, “Slow”.
6. Long press 2 seconds the Jog Wheel to back to last menu –“Status”, then back to main menu by long press again.

Zoom/Focus Spd

With this function, you can select zoom/focus speed from “Fast”, “Medium”, “Slow”.

1. Double click the Jog Wheel to access main menu.
2. Turn the Jog Wheel clockwise then display “Options”.
3. Double click the Jog Wheel to access “Options”, turn the Jog Wheel to select “Status”.
4. Double click the Jog Wheel to access “Status” menu, The display will show “Zoom/Focus Spd”.
5. Double click the Jog Wheel to access “Zoom/Focus Spd”, The display will show “Fast”, Turn the Jog Wheel to select “Fast”, “Medium”, “Slow”.
6. Long press 2 seconds the Jog Wheel to back to last menu – “Status”, then back to main menu by long press again.

Reset LED Fade

1. Turn the Jog Wheel clockwise then display “Options”.
2. Double click the Jog Wheel to access “Options”, turn the Jog Wheel to select “Status”.
3. Double click the Jog Wheel to access “Status” menu, The display will show “Reset LED Fade”.
4. Double click the Jog Wheel to access “Reset LED Fade”, The display will show “OFF”, Turn the Jog Wheel to select “ON”.
5. Long press 2 seconds the Jog Wheel to back to last menu – “Status”, then back to main menu by long press again.

Hibernation: Standby mode

The device and step motors will be power off if the fixture stay without DMX signal for 15 mins (Factory default). And the fixture will be reset before working once it receive DMX signal again.

1. Double click the Jog Wheel to access main menu.
2. Turn the Jog Wheel clockwise then display “Options”.
3. Double click the Jog Wheel to access “Options”, turn the Jog Wheel to select “Status”.
4. Double click the Jog Wheel to access “Status” menu, The display will show “Hibernation”.
5. Double click the Jog Wheel to access “Hibernation”, The display will show “OFF”, Turn the Jog Wheel to select “01M”, “02M” . . . “99M”.
6. Long press 2 seconds the Jog Wheel to back to last menu – “Status”, then back to main menu by long press again.

DMX Output

With this function, you can select DMX Output.

1. Double click the Jog Wheel to access main menu.
2. Turn the Jog Wheel clockwise then display “Options”.
3. Double click the Jog Wheel to access “Options”, turn the Jog Wheel to select “Status”.
4. Double click the Jog Wheel to access “Status” menu, The display will show “DMX Output”.
5. Double click the Jog Wheel to access “DMX Output”, The display will show “OFF”, Turn the Jog Wheel to select “ON”.
6. Long press 2 seconds the Jog Wheel to back to last menu – “Status”, then back to main menu by long press again.

19.3.2. Service PIN

Password

The Password for this function is “050”.

Set IP

1. Double click the Jog Wheel to access main menu.
2. Turn the Jog Wheel clockwise then display“Options”.
3. Double click the Jog Wheel to access“Options”, turn the Jog Wheel to select “Service PIN”.
4. Double click the Jog Wheel to access“Service PIN”menu, The display will show“Set IP”.
5. Double click the Jog Wheel to access“Set IP” , The display will show “XXX.XXX.XXX.XXX”.
6. Long press 2 seconds the Jog Wheel to back to last menu –“Service PIN”, then back to main menu by long press again.

Set Mask IP

1. Double click the Jog Wheel to access main menu.
2. Turn the Jog Wheel clockwise then display“Options”.
3. Double click the Jog Wheel to access“Options”, turn the Jog Wheel to select “Service PIN”.
4. Double click the Jog Wheel to access“Service PIN”menu, The display will show“Set Mask IP”.
5. Double click the Jog Wheel to access“Set Mask IP” , The display will show “XXX.XXX.XXX.XXX”.
6. Long press 2 seconds the Jog Wheel to back to last menu –“Service PIN”, then back to main menu by long press again.

DHCP

1. Double click the Jog Wheel to access main menu.
2. Turn the Jog Wheel clockwise then display“Options”.
3. Double click the Jog Wheel to access“Options”, turn the Jog Wheel to select “Service PIN”.
4. Double click the Jog Wheel to access“Service PIN”menu , The display will show“DHCP”.
5. Double click the Jog Wheel to access“DHCP”, The display will show “ON”, Turn the Jog Wheel to select“OFF”.
6. Long press 2 seconds the Jog Wheel to back to last menu –“Service PIN”, then back to main menu by long press again.

Cross Load SW

1. Double click the Jog Wheel to access main menu.
2. Turn the Jog Wheel clockwise then display“Options”.
3. Double click the Jog Wheel to access“Options”, turn the Jog Wheel to select “Service PIN”.
4. Double click the Jog Wheel to access“Service PIN”menu, The display will show“Cross Load SW”.
5. Double click the Jog Wheel to access“Cross Load SW”, The display will show “OFF”, Turn the Jog Wheel to select“ON”.
6. Long press 2 seconds the Jog Wheel to back to last menu –“Service PIN”, then back to main menu by long press again.

USB Update

1. Double click the Jog Wheel to access main menu.
2. Turn the Jog Wheel clockwise then display“Options”.
3. Double click the Jog Wheel to access“Options”, turn the Jog Wheel to select “Service PIN”.

4. Double click the Jog Wheel to access“Service PIN”menu, The display will show“USB Update”.
5. Double click the Jog Wheel to access“USB Update”, The display will show “OFF”, Turn the Jog Wheel to select“ON”.
6. Long press 2 seconds the Jog Wheel to back to last menu –“Service PIN”, then back to main menu by long press again.

Clr LED Timer

1. Double click the Jog Wheel to access main menu.
2. Turn the Jog Wheel clockwise then display“Options”.
3. Double click the Jog Wheel to access“Options”, turn the Jog Wheel to select “Service PIN”.
4. Double click the Jog Wheel to access“Service PIN”menu, The display will show“Clr LED Timer”.
5. Double click the Jog Wheel to access“Clr LED Timer”, The display will show “OFF”, Turn the Jog Wheel to select“ON”.
6. Long press 2 seconds the Jog Wheel to back to last menu –“Service PIN”, then back to main menu by long press again.

Clr Error Info

1. Double click the Jog Wheel to access main menu.
2. Turn the Jog Wheel clockwise then display“Options”.
3. Double click the Jog Wheel to access“Options”, turn the Jog Wheel to select “Service PIN”.
4. Double click the Jog Wheel to access“Service PIN”menu, The display will show“Clr Error Info”.
5. Double click the Jog Wheel to access“Clr Error Info”, The display will show “OFF”, Turn the Jog Wheel to select“ON”.
6. Long press 2 seconds the Jog Wheel to back to last menu –“Service PIN”, then back to main menu by long press again.

19.3.3. Fans Control

Fans Speed

With this function you can set the speed of the running fans.The selections have Auto、Stage、 Silence and Super Silence.

1. Double click the Jog Wheel to access main menu.
2. Turn the Jog Wheel clockwise then display“Options”.
3. Double click the Jog Wheel to access“Options”, turn the Jog Wheel to select “Fans Control”.
4. Double click the Jog Wheel to access“Fans Control”menu, The display will show“Fans Speed”.
5. Double click the Jog Wheel to access “Fans Speed”, The display will show “Auto”, Turn the Jog Wheel to select“Stage”, “Silence”, “Super Silence”.
6. Long press 2 seconds the Jog Wheel to back to last menu –“Fans Control”, then back to main menu by long press again.

Constant Fans

1. Double click the Jog Wheel to access main menu.
2. Turn the Jog Wheel clockwise then display“Options”.
3. Double click the Jog Wheel to access“Options”, turn the Jog Wheel to select “Fans Control”.
4. Double click the Jog Wheel to access“Fans Control”menu, The display will

show“Constant Fans”.

5. Double click the Jog Wheel to access “Constant Fans”, The display will show “OFF”, Turn the Jog Wheel to select“ON”.
6. Long press 2 seconds the Jog Wheel to back to last menu –“Fans Control”, then back to main menu by long press again.

19.3.4. Disp. Setting

Shut off Time

With this function you can shut off the LCD display after 2 to 60 minutes.The default is 5 minutes.

1. Double click the Jog Wheel to access main menu.
2. Turn the Jog Wheel clockwise then display“Options”.
3. Double click the Jog Wheel to access“Options”, turn the Jog Wheel to select “Display Setting”.
4. Double click the Jog Wheel to access“Display Setting”menu, The display will show“Shut off Time”.
5. Double click the Jog Wheel to access“Shut off Time”, The display will show “05m”, Turn the Jog Wheel to select“02~60m”.
6. Long press 2 seconds the Jog Wheel to back to last menu –“Display Setting”, then back to main menu by long press again.

Flip Display

With this function you can rotate the display by 180°.

1. Double click the Jog Wheel to access main menu.
2. Turn the Jog Wheel clockwise then display“Options”.
3. Double click the Jog Wheel to access“Options”, turn the Jog Wheel to select “Display Setting”.
4. Double click the Jog Wheel to access“Display Setting”menu, The display will show“Flip Display”.
5. Double click the Jog Wheel to access“Flip Display”, The display will show “OFF”, Turn the Jog Wheel to select“ON”.
6. Long press 2 seconds the Jog Wheel to back to last menu –“Display Setting”, then back to main menu by long press again.

Key Lock

With this function you can activate the automatic key lock function.If this function is activated, the keys will be locked automatically after exiting the edit mode for 15 seconds.keeping press the <MODE/ESC> key for 3seconds if you do not need this function.

1. Double click the Jog Wheel to access main menu.
2. Turn the Jog Wheel clockwise then display“Options”.
3. Double click the Jog Wheel to access“Options”, turn the Jog Wheel to select “Display Setting”.
4. Double click the Jog Wheel to access“Display Setting”menu, The display will show“Key Lock”.
5. Double click the Jog Wheel to access“Key Lock”, The display will show“OFF”, Turn the Jog Wheel to select“ON”.
6. Long press 2 seconds the Jog Wheel to back to last menu –“Display Setting”, then back to main menu by long press again.

DispFlash

With this function you can the entire display to be flipped by 180° to allow for better view when the fixture is hung from truss or a ceiling.This function is disabled as default.

1. Double click the Jog Wheel to access main menu.
2. Turn the Jog Wheel clockwise then display“Options”.
3. Double click the Jog Wheel to access“Options”, turn the Jog Wheel to select “Display Setting”.
4. Double click the Jog Wheel to access“Display Setting”menu , The display will show“DispFlash”.
5. Double click the Jog Wheel to access“DispFlash”, The display will show “OFF”, Turn the Jog Wheel to select“ON”.
6. Long press 2 seconds the Jog Wheel to back to last menu –“Display Setting”, then back to main menu by long press again.

19.3.5. Signal Select

1. Double click the Jog Wheel to access main menu.
2. Turn the Jog Wheel clockwise then display“Options”.
3. Double click the Jog Wheel to access“Options”, turn the Jog Wheel to select “Signal Select”.
4. Double click the Jog Wheel to access“Signal Select”, The display will show “DMX”, Turn the Jog Wheel to select“DMX”, “WDMX”, “Art-Net”, “sACN”.
5. Long press 2 seconds the Jog Wheel to back to last menu –“Signal Select”, then back to main menu by long press again.

19.3.6. Temperature C/F

With this function you can display the temperature in Celsius or Fahrenheit.

1. Double click the Jog Wheel to access main menu.
2. Turn the Jog Wheel clockwise then display“Options”.
3. Double click the Jog Wheel to access“Options”, turn the Jog Wheel to select “Temperature C/ F”.
4. Double click the Jog Wheel to access“Temperature C/ F”, The display will show “Fahrenheit”, Turn the Jog Wheel to select“Celsius”.
5. Long press 2 seconds the Jog Wheel to back to last menu –“Temperature C/ F”, then back to main menu by long press again.

19.3.7. Initial Pos.

With this function you can display initial effect position.

1. Double click the Jog Wheel to access main menu.
2. Turn the Jog Wheel clockwise then display“Options”.
3. Double click the Jog Wheel to access“Options”, turn the Jog Wheel to select “Initial Pos.”.
4. Double click the Jog Wheel to access“Initial Pos.”, The display will show “PAN=XXX”.
5. Long press 2 seconds the Jog Wheel to back to last menu –“Initial Pos.”, then back to main menu by long press again.

19.3.8. Wireless DMX

From factory, this projector is prepared for wireless data transmission (W-DMX) .If you wish to de-activate W-DMX control, you can select the function“De-activate WDMX”by turning the encoder.With the function“rest”, you can log out the projector from the wireless sender.

1. Double click the Jog Wheel to access main menu.
2. Turn the Jog Wheel clockwise then display“Options”.
3. Double click the Jog Wheel to access“Options”, turn the Jog Wheel to select “Wireless DMX”.
4. Double click the Jog Wheel to access“Wireless DMX”, The display will show “Activate WDMX”, Turn the Jog Wheel to select“Activate WDMX” , “Rest WDMX” .

5. Long press 2 seconds the Jog Wheel to back to last menu –“Wireless DMX”, then back to main menu by long press again.

19.3.9. Dim Curve

1. Double click the Jog Wheel to access main menu.
2. Turn the Jog Wheel clockwise then display“Options”.
3. Double click the Jog Wheel to access“Options”, turn the Jog Wheel to select “Dim Curve”.
4. Double click the Jog Wheel to access“Dim Curve”, The display will show “Square Law”, Turn the Jog Wheel to select“Linear”.
5. Long press 2 seconds the Jog Wheel to back to last menu –“Dim Curve”, then back to main menu by long press again.

19.3.10. Refresh Select

With this function you can select the refresh.

1. Double click the Jog Wheel to access main menu.
2. Turn the Jog Wheel clockwise then display“Options”.
3. Double click the Jog Wheel to access“Options”, turn the Jog Wheel to select “Refresh Select”.
4. Double click the Jog Wheel to access“Refresh Select”, The display will show “1.2K”, Turn the Jog Wheel to select“2.4K”, “16K”, “25K”.
5. Long press 2 seconds the Jog Wheel to back to last menu –“Refresh Select”, then back to main menu by long press again.

19.3.11. Gobo Correction

1. Double click the Jog Wheel to access main menu.
2. Turn the Jog Wheel clockwise then display“Options”.
3. Double click the Jog Wheel to access“Options”, turn the Jog Wheel to select “Gobo Correction”.
4. Double click the Jog Wheel to access“Gobo Correction”, The display will show “ON”, Turn the Jog Wheel to select“OFF”.
5. Long press 2 seconds the Jog Wheel to back to last menu –“Gobo Correction”, then back to main menu by long press again.

19.3.12. Reset P/T Fade

1. Double click the Jog Wheel to access main menu.
2. Turn the Jog Wheel clockwise then display“Options”.
3. Double click the Jog Wheel to access“Options”, turn the Jog Wheel to select “Reset P/T Fade”.
4. Double click the Jog Wheel to access“Reset P/T Fade”, The display will show “OFF”, Turn the Jog Wheel to select“ON”.
5. Long press 2 seconds the Jog Wheel to back to last menu –“Reset P/T Fade”, then back to main menu by long press again.

19.3.13. Frost (Progressive)

1. Double click the Jog Wheel to access main menu.
2. Turn the Jog Wheel clockwise then display“Options”.
3. Double click the Jog Wheel to access“Options”, turn the Jog Wheel to select “Frost (Progressive)”.
4. Double click the Jog Wheel to access“Frost (Progressive)”, The display will show “ON”, Turn the Jog Wheel to select“OFF”.
5. Long press 2 seconds the Jog Wheel to back to last menu –“Frost (Progressive)”, then back to main menu by long press again.

19.3.14. Silence Movem.

1. Double click the Jog Wheel to access main menu.
2. Turn the Jog Wheel clockwise then display“Options”.
3. Double click the Jog Wheel to access“Options”, turn the Jog Wheel to select “Silence Movem.”.
4. Double click the Jog Wheel to access“Silence Movem.”, The display will show “OFF”, Turn the Jog Wheel to select“ON”.
5. Long press 2 seconds the Jog Wheel to back to last menu –“Frost (Progressive)”, then back to main menu by long press again.

19.3.15. Trigger

DMX Value Disp.

With this function you can display the DMX 512 value of each channel.The display automatically shows the channel with a value changing.

1. Double click the Jog Wheel to access main menu.
2. Turn the Jog Wheel clockwise then display“Options”.
3. Double click the Jog Wheel to access“Options”, turn the Jog Wheel to select “Trigger”.
4. Double click the Jog Wheel to access“Trigger”menu, The display will show “DMX Value Disp”.
5. Double click the Jog Wheel to access“DMX Value Disp”, The display will show “PAN=.....”.
6. Long press 2 seconds the Jog Wheel to back to last menu –“Trigger”, then back to main menu by long press again.

Set to Slave

1. Double click the Jog Wheel to access main menu.
2. Turn the Jog Wheel clockwise then display“Options”.
3. Double click the Jog Wheel to access“Options”, turn the Jog Wheel to select “Trigger”.
4. Double click the Jog Wheel to access“Trigger”menu, The display will show “Set to Slave”.
5. Double click the Jog Wheel to access“Set to Slave”, The display will show “Slave 1”、 “Slave 2”、 “Slave 3”.
6. Long press 2 seconds the Jog Wheel to back to last menu –“Trigger”, then back to main menu by long press again.

Auto Program

With this function, you can run the internal program.You can select the desired program under“**Select program**”.You can set the number of steps under“**Edit program**” . You can edit the individual scenes under“**Edit scenes**”.With this function, you can run the individual scenes either automatically, i.e.with the adjusted Step-Time.

1. Double click the Jog Wheel to access main menu.
2. Turn the Jog Wheel clockwise then display“Options”.
3. Double click the Jog Wheel to access“Options”, turn the Jog Wheel to select “Trigger”.
4. Double click the Jog Wheel to access“Trigger”menu, The display will show “Auto Program”.
5. Double click the Jog Wheel to access“Auto Program”, The display will show “Master”, “Alone”.
6. Long press 2 seconds the Jog Wheel to back to last menu –“Trigger”, then back to main menu by long press again.

19.3.16. Reset Default

With this function, you can select restore factory set for ON or OFF, the default is OFF.

1. Double click the Jog Wheel to access main menu.
2. Turn the Jog Wheel clockwise then display“Options”.
3. Double click the Jog Wheel to access“Options”, turn the Jog Wheel to select “Reset Default”.
4. Double click the Jog Wheel to access“Reset Default”menu, The display will show “OFF”, Turn the Jog Wheel to select“ON”.
5. Long press 2 seconds the Jog Wheel to back to last menu –“Reset Default”, then back to main menu by long press again.

19.3.17. Reset User

Address

1. Double click the Jog Wheel to access main menu.
2. Turn the Jog Wheel clockwise then display“Options”.
3. Double click the Jog Wheel to access“Options”, turn the Jog Wheel to select “Reset User”.
4. Double click the Jog Wheel to access“Reset User”menu, The display will show “Address”.
5. Double click the Jog Wheel to access“Address”, The display will show “001~XXX”.
6. Long press 2 seconds the Jog Wheel to exit, and come back to last menu –“Reset User”, then back to main menu by pressing the Jog Wheel 2 seconds again.

Mode

1. Double click Jog Wheel to access main menu.
2. Turn the Jog Wheel clockwise then display“Options”.
3. Double click the Jog Wheel to access“Options”, turn the Jog Wheel to select“Reset User”.
4. Double click the Jog Wheel to access“Reset User”menu, The display will show “Mode”.
5. Double click the Jog Wheel to access“Mode”, The display will show “Extend Mode”. turn the Jog Wheel to select“Basic mode”, “Stand Mode”, “User Mode A”, “User Mode B”and“User Mode C”.
6. Long press 2 seconds the Jog Wheel to exit, and come back to last menu –“Reset User”, then back to main menu by pressing the Jog Wheel 2 seconds again.

Fans Speed

1. Double click Jog Wheel to access main menu.
2. Turn the Jog Wheel clockwise then display“Options”.
3. Double click the Jog Wheel to access“Options”, turn the Jog Wheel to select“Reset User”.
4. Double click the Jog Wheel to access“Reset User”menu, The display will show “Fans Speed”.
5. Double click the Jog Wheel to access“Fans Speed”, The display will show “Auto”. turn the Jog Wheel to select“Stage”, “Silence”, “Super Silence”.
6. Long press 2 seconds the Jog Wheel to exit, and come back to last menu –“Reset User”, then back to main menu by pressing the Jog Wheel 2 seconds again.

Constant Fans

1. Double click Jog Wheel to access main menu.
2. Turn the Jog Wheel clockwise then display“Options”.
3. Double click the Jog Wheel to access“Options”, turn the Jog Wheel to select“Reset User”.

4. Double click the Jog Wheel to access “Reset User” menu, The display will show “Constant Fans”.
5. Double click the Jog Wheel to access “Constant Fans”, The display will show “OFF”. turn the Jog Wheel to select “ON”.
6. Long press 2 seconds the Jog Wheel to exit, and come back to last menu – “Reset User”, then back to main menu by pressing the Jog Wheel 2 seconds again.

10.4. Info

19.4.1. Time Info.

Current Time

With this function, you can display the temporary running time of the device from the last power on. The display shows “XXXX”, “XXXX” stands for the number of hours. The counter is reset after turning the device off.

1. Double click the Jog Wheel to access main menu.
2. Turn the Jog Wheel clockwise then display “Info”.
3. Double click the Jog Wheel to access “Info”, turn the Jog Wheel to select “Time Info.”.
4. Double click the Jog Wheel to access “Time Info.”, The display will show “Current Time”.
5. Double click the Jog Wheel to access “Current Time”, The display will show “XXXX (Hours)”.
6. Long press 2 seconds the Jog Wheel to back to last menu – “Time Info”, then back to main menu by long press again.

Ttl Life Hrs

With this function, you can display the running time of the device. The display shows “XXXX”, “XXXX” stands for the number of hours.

1. Double click the Jog Wheel to access main menu.
2. Turn the Jog Wheel clockwise then display “Info”.
3. Double click the Jog Wheel to access “Info”, turn the Jog Wheel to select “Time Info.”.
4. Double click the Jog Wheel to access “Time Info.”, The display will show “Ttl Life Hrs”.
5. Double click the Jog Wheel to access “Ttl Life Hrs”, The display will show “XXXX (Hours)”.
6. Long press 2 seconds the Jog Wheel to back to last menu – “Time Info”, then back to main menu by long press again.

Last Run Hrs

With this function, you can display last the running time of the device. The display shows “XXXX”, “XXXX” stands for the number of hours.

1. Double click the Jog Wheel to access main menu.
2. Turn the Jog Wheel clockwise then display “Info”.
3. Double click the Jog Wheel to access “Info”, turn the Jog Wheel to select “Time Info.”.
4. Double click the Jog Wheel to access “Time Info.”, The display will show “Last Run Hrs”.
5. Double click the Jog Wheel to access “Last Run Hrs”, The display will show “XXXX (Hours)”.
6. Long press 2 seconds the Jog Wheel to back to last menu – “Time Info”, then back to main menu by long press again.

LED Hours

1. Double click the Jog Wheel to access main menu.
2. Turn the Jog Wheel clockwise then display “Info”.

3. Double click the Jog Wheel to access“Info”, turn the Jog Wheel to select“Time Info.”.
4. Double click the Jog Wheel to access“Time Info.”, The display will show“LED Hours”.
5. Double click the Jog Wheel to access“Last Run Hrs”, The display will show“XXXX (Hours)”.
6. Long press 2 seconds the Jog Wheel to back to last menu –“Time Info”, then back to main menu by long press again.

Timer PIN

With this function, you can display the timer password.

1. Double click the Jog Wheel to access main menu.
2. Turn the Jog Wheel clockwise then display“Info”.
3. Double click the Jog Wheel to access“Info”, turn the Jog Wheel to select “Time Info.”.
4. Double click the Jog Wheel to access“Time Info.”, The display will show “Timer PIN”.
5. Double click the Jog Wheel to access“Timer PIN”, The display will show “Password=038”.
6. Long press 2 seconds the Jog Wheel to back to last menu –“Time Info”, then back to main menu by long press again.

Clr Last Run

With this function, you can clear last run time of the fixture.The display shows“ON”or “OFF”, Press“Enter”to confirm.

1. Double click the Jog Wheel to access main menu.
2. Turn the Jog Wheel clockwise then display“Info”.
3. Double click the Jog Wheel to access“Info”, turn the Jog Wheel to select “Time Info.”.
4. Double click the Jog Wheel to access“Time Info.”, The display will show “Clear Last Run”.
5. Double click the Jog Wheel to access“Clear Last Run”, The display will show “OFF”, turn the Jog Wheel to select“ON”.
6. Long press 2 seconds the Jog Wheel to back to last menu –“Time Info”, then back to main menu by long press again.

19.4.2. Temp.Info

With this function you can display the temperature on the display board of the base (near CMY-filter) in Celsius.

1. Double click the Jog Wheel to access main menu.
2. Turn the Jog Wheel clockwise then display“Info”.
3. Double click the Jog Wheel to access“Info”, turn the Jog Wheel to select “Temp Info”.
4. Double click the Jog Wheel to access“Temp Info”, The display will show “Head Temp.”.
5. Double click the Jog Wheel to access“Head Temp.”, The display will show “AAA: xxx °C/ °F”.
6. Long press 2 seconds the Jog Wheel to back to last menu –“Temp Info”, then back to main menu by long press again.

19.4.3. Fan Info.

With this function, you can display the software version of the device.

1. Double click the Jog Wheel to access main menu.
2. Turn the Jog Wheel clockwise then display“Info”.
3. Double click the Jog Wheel to access“Info”, turn the Jog Wheel to select “Fan Info.”.
4. Double click the Jog Wheel to access“Fan Info.”, The display will show “AAA Fan xxxx RPM”.
5. Long press 2 seconds the Jog Wheel to back to last menu –“Fan Info.”, then back to main menu by long press again.

19.4.4. Software Ver

With this function, you can display the software version of the device.

1. Double click the Jog Wheel to access main menu.
2. Turn the Jog Wheel clockwise then display“Info”.
3. Double click the Jog Wheel to access“Info”, turn the Jog Wheel to select “Software Ver”.
4. Double click the Jog Wheel to access“Software Ver”, The display will show “V1.0.....”.
5. Long press 2 seconds the Jog Wheel to back to last menu –“Software Ver”, then back to main menu by long press again.

19.4.5. Network

1. Double click the Jog Wheel to access main menu.
2. Turn the Jog Wheel clockwise then display“Info”.
3. Double click the Jog Wheel to access“Info”, turn the Jog Wheel to select “Network”.
4. Double click the Jog Wheel to access“Network”, The display will show“IP” , Turn the Jog Wheel to select“Mask”, “Mac”.
5. Long press 2 seconds the Jog Wheel to back to last menu –“Network”, then back to main menu by long press again.

19.4.6. Error Info.

1. Double click the Jog Wheel to access main menu.
2. Turn the Jog Wheel clockwise then display“Info”.
3. Double click the Jog Wheel to access“Info”, turn the Jog Wheel to select “Error Info.”.
4. Double click the Jog Wheel to access“Error Info.”, The display will show“Error Record 1” , “.....”.
5. Long press 2 seconds the Jog Wheel to back to last menu –“Network”, then back to main menu by long press again.

10.5. Test

19.5.1. Home

With this function you can reset the device via the Control Board.You can select the different reset functions by turning the encoder.

1. Double click the Jog Wheel to access main menu.
2. Turn the Jog Wheel clockwise then display“Test”.
3. Double click the Jog Wheel to access“Test”, turn the Jog Wheel to select “Home”.
4. Double click the Jog Wheel to access“Home”, The display will show“All”, Turn the Jog Wheel to select“All”, “Pan&Tilt”, “Color”, “Gobo”, “Other”.
5. Long press 2 seconds the Jog Wheel to back to last menu –“Test”, then back to main menu by long press again.

19.5.2. Test Channel

With this function you can test each channel’s function to ensure correct operation.

1. Double click the Jog Wheel to access main menu.
2. Turn the Jog Wheel clockwise then display“Test”.
3. Double click the Jog Wheel to access“Test”, turn the Jog Wheel to select “Test Channel”.
4. Double click the Jog Wheel to access“Test Channel”, The display will show“PAN”, Turn the Jog Wheel to select other channel.
5. Long press 2 seconds the Jog Wheel to back to last menu –“Test”, then back to main menu by long press again.

19.5.3. Manual Control

When set to Manual Mode, fixture will be back to factory settings. If want to adjust brightness, can adjust by shutter and dimming channel, channel value is 0-255. Other functions can be set according to user's real need.

1. Double click the Jog Wheel to access main menu.
2. Turn the Jog Wheel clockwise then display "Test".
3. Double click the Jog Wheel to access "Test", turn the Jog Wheel to select "Manual control".
4. Double click the Jog Wheel to access "Manual control", The display will show "PAN=XXX".
5. Long press 2 seconds the Jog Wheel to back to last menu – "Test", then back to main menu by long press again.

19.5.4. Calibration

With this function, you can calibrate and adjust the effect wheels to their correct positions. The password of calibrate values is 050.

1. Double click the Jog Wheel to access main menu.
2. Turn the Jog Wheel clockwise then display "Test".
3. Double click the Jog Wheel to access "Test", turn the Jog Wheel to select "Calibration".
4. Double click the Jog Wheel to access "Calibration", The display will show "Password=050".
5. Long press 2 seconds the Jog Wheel to back to last menu – "Test", then back to main menu by long press again.

19.5.5. Gobo Replace

1. Double click the Jog Wheel to access main menu.
2. Turn the Jog Wheel clockwise then display "Test".
3. Double click the Jog Wheel to access "Test", turn the Jog Wheel to select "Gobo Replace".
4. Double click the Jog Wheel to access "Gobo Replace", The display will show "Gobo Wheel 1".
5. Long press 2 seconds the Jog Wheel to back to last menu – "Test", then back to main menu by long press again.

10.6. Preset

1. Double click the Jog Wheel to access main menu.
2. Turn the Jog Wheel clockwise then display "Preset".
3. Double click the Jog Wheel to access "Preset", turn the Jog Wheel to select "Select prog.", "Edit prog.", "Edit Scenes", "Scenes Input".
4. Long press 2 seconds the Jog Wheel to back to last menu – "Preset", then back to main menu by long press again.

Run the auto program: A master fixture can output to three different program signals to the slave fixture to operate. It means the host will send cyclically in the following orders (The host will keep operating the program of Part 1) Then the slave fixture will make the selectively receiving according to its own set.



1. If the slave fixture chooses Run For Slave 1 from the menu of 1-3, then it will receive the part 1's automatic program from link, in the same way, when the slave fixture


- chooses Run For Slave 2, then it will receive the part 2's automatic program from link.
2. Enter the menu of 1-3 Function Mode---Set To Slave, Here to set machine operate which part of the program during the host-slave connection
 3. Enter the menu of 1-4, 1-5 Function Mode---Set To Master
 4. Enter the menu of 8-1 Edit Program---Auto Program Part1.The host outputs three groups driven program---Part1, Part2, Part3(Part1 program runs the same effect as the host)
 5. Enter the menu of 8-2 Edit Program---Edit Program.Edit the program's connection, connect the scene in order
 6. The editor of the scene, there are as many as 250 scenario editors, and every scene can have a program connection of 10.

Note:


Part 2, Part 3 repeat in accordance with the Part1's repeat.For example: When Part 1 uses Program 2, Part 2 uses Program 4, Part 3 uses Program 6, Assume: Program 2 includes scene of 10, 11, 12, 13; Program 4 includes scene of 8, 9, 10; Program 6 includes scene of 12, 13, 14, 15; Then it will run as below.

Example:


Part 1:

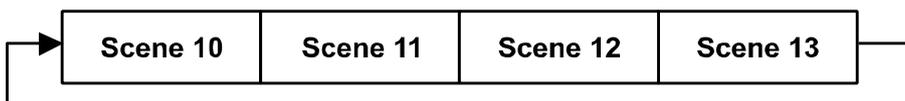

Part 2:

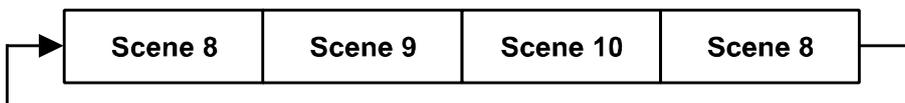

Part 3:

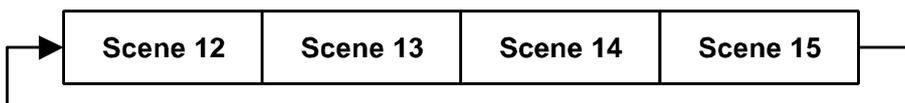

11. DMX PROTOCOL

DMX channel's functions and their values (61DMX channels):				
Mode/Channel			Value	Function
St	Ba	Ex		
1	1	1		<u>PAN Movement 8bit :</u>
			0-255	Pan Movement
2		2		<u>Pan Fine 16bit</u>
			0-255	Fine control of Pan movement
3	2	3		<u>TILT Movement 8bit :</u>
			0-255	Tilt Movement
4		4		<u>Tilt Fine 16bit</u>
			0-255	Fine control of Tilt movement
5	3	5		<u>Speed Pan/Tilt movement:</u>
			0-225	max to min speed
			226-235	blackout by movement
			236-245	blackout by all wheel changing
			246-255	no function
6	4	6		<u>Shutter, strobe:</u>
			0-10	Shutter closed
			11-20	No function (shutter open)
			21-117	Strobe effect slow to fast
			118-126	No function (shutter open)
			127-180	Pulse-effect in sequences
			181-191	No function (shutter open)
			192-245	Random strobe effect slow to fast
			246-255	No function (shutter open)
7	5	7		<u>Dimmer intensity:</u>
			0-255	Intensity 0 to 100%
		8		<u>Fine Dimmer intensity:</u>
			0-255	Dimmer intensity fine
8	6	9		<u>Zoom :</u>
			0-255	Zoom adjustment from small to big
		10		<u>Zoom Fine:</u>
			0-255	Zoom adjustment Fine
9	7	11		<u>Focus :</u>
			0-255	Continuous adjustment from near to far
		12		<u>Focus Fine:</u>
			0-255	Continuous adjustment Fine
10	8	13		<u>Auto Focus :</u>
			0-50	Auto Focus Off
			51-100	5m
			101-150	7.5m
			151-200	10m
			201-255	15m
11	9	14		<u>AutoFocus Fine:</u>

			0-255	Continuous adjustment Fine
12	10	15		<u>Color Wheel:</u>
			0-3	Open / white
			4-7	Color 1
			8-11	Color 2
			12-15	Color 3
			16-19	Color 4
			20-23	Color 5
			24-27	Color 6
			28-127	Color indexing
			128-189	Forwards rainbow effect from fast to slow
			190-193	No rotation
			194-255	Backwards rainbow effect from slow to fast
		16		<u>Color Wheel Fine:</u>
			0-255	Color Wheel colour change to any position Fine
13	11	17		<u>Cyan Color :</u>
			0-255	Cyan (0-white, 255-100% Cyan)
		18		<u>Cyan Color Fine :</u>
			0-255	Cyan Fine
14	12	19		<u>Magenta Color :</u>
			0-255	Magenta (0-white, 255-100% magenta)
		20		<u>Magenta Color Fine :</u>
			0-255	Magenta Fine
15	13	21		<u>Yellow Color :</u>
			0-255	Yellow (0-white, 255-100% Yellow)
		22		<u>Yellow Color Fine :</u>
			0-255	Yellow Fine
16	14	23		<u>CTO Color :</u>
			0-255	CTO (0-white, 255-100% CTO)
		24		<u>CTO Color Fine :</u>
			0-255	CTO Fine
17	15	25		<u>CTB Color :</u>
			0-255	CTB (0-white, 255-100% CTO)
		26		<u>CTB Color Fine :</u>
			0-255	CTB Fine
18	16	27		<u>CTP Color :</u>
			0-255	CTP (0-white, 255-100% CTO)
		28		<u>CTP Color Fine :</u>
			0-255	CTP Fine
19	17	29		<u>Color Presets:</u>
			0-255	See Appendix
20	18	30		Reserved
21	19	31		Reserved
22	20	32		Reserved
23	21	33		<u>Rotating gobos, cont. rotation :</u>

			0-9	Open
			10-19	Rot. gobo 1
			20-29	Rot. gobo 2
			30-39	Rot. gobo 3
			40-49	Rot. gobo 4
			50-59	Rot. gobo 5
			60-69	Rot. gobo 6
			70-77	Rot. Gobo 7
			78-93	Gobo 1 shake slow to fast
			94-109	Gobo 2 shake slow to fast
			110-125	Gobo 3 shake slow to fast
			126-141	Gobo 4 shake slow to fast
			142-157	Gobo 5 shake slow to fast
			158-173	Gobo 6 shake slow to fast
			174-189	Gobo 7 shake slow to fast
			190-221	Gobo wheel rotation forwards from fast to slow
			222-223	No rotation
			224-255	Gobo wheel rotation f backwards from slow to fast
				<u>Rotating gobo index,rotating gobo rotation :</u>
24	22	34	0-127	Gobo indexing
			128-189	Forwards gobo rotation from fast to slow
			190-193	No rotation
			194-255	Backwards gobo rotation from slow to fast
		35		<u>Rotating gobo indexing Fine :</u>
			0-255	Fine indexing
				<u>Animation wheel :</u>
25	23	36	0-7	No rotation
			8-127	Forwards rotation from fast to slow
			128-135	No rotation
			136-255	Backwards rotation from slow to fast
				<u>Iris:</u>
26	24	37	0-191	Max. diameter to Min.diameter
			192-223	Pulse closing fast to slow
			224-255	Pulse opening slow to fast
		38		<u>Iris Fine:</u>
			0-255	Iris Fine
				<u>Prism :</u>
27	25	39	0-127	Open
			128-255	Prism
				<u>Rotating prism index, rotating prism rotation</u>
28	26	40	0-127	Prism indexing
			128-189	Forwards prism rotation from fast to slow
			190-193	No rotation
			194-255	Backwards prism rotation from slow to fast
		41		<u>Rotating prism indexing Fine :</u>

			0-255	Fine indexing
29	27	42		<u>Frost :</u>
			0-255	0-100%
30	28	43		<u>Blade 1A :</u>
			0-255	Open to Close
		44		<u>Blade 1A Fine :</u>
			0-255	Open to Close Fine
31	29	45		<u>Blade 1B :</u>
			0-255	Open to Close
		46		<u>Blade 1B Fine :</u>
			0-255	Open to Close Fine
32	30	47		<u>Blade 2A :</u>
			0-255	Open to Close
		48		<u>Blade 2A Fine :</u>
			0-255	Open to Close Fine
33	31	49		<u>Blade 2B :</u>
			0-255	Open to Close
		50		<u>Blade 2B Fine :</u>
			0-255	Open to Close Fine
34	32	51		<u>Blade 3A :</u>
			0-255	Open to Close
		52		<u>Blade 3A Fine :</u>
			0-255	Open to Close Fine
35	33	53		<u>Blade 3B :</u>
			0-255	Open to Close
		54		<u>Blade 3B Fine :</u>
			0-255	Open to Close Fine
36	34	55		<u>Blade 4A :</u>
			0-255	Open to Close
		56		<u>Blade 4A Fine :</u>
			0-255	Open to Close Fine
37	35	57		<u>Blade 4B :</u>
			0-255	Open to Close
		58		<u>Blade 4B Fine :</u>
			0-255	Open to Close Fine
38	36	59		<u>All Blade Rotation :</u>
			0-255	All Blade Rotation
		60		<u>All Blade Rotation Fine :</u>
			0-255	All Blade Rotation Fine
39	37	61		<u>Control, reset, internal programs:</u>
			0-4	unused
			5-9	Display Off
			10-14	Display On
			15-19	Display Invert Off
			20-24	Display Invert On

	25-26	Auto fan control mode
	27-28	Stage fan control mode
	29-30	Silence fan control mode
	31-32	Super Silence fan control mode
	33-34	Constant Fans Off
	35-36	Constant Fans On
	37-44	unused
	45-49	Square Law
	50-54	Linear
	55-58	1.2K
	59-62	2.4K
	63-66	16K
	67-69	25K
	70-74	Gobo correction Off
	75-79	Gobo correction On
	80-84	All motor reset
	85-87	Scan motor reset
	88-90	Colors motor reset
	91-93	Gobo motor reset
	94	unused
	95	Reset P/T Fade Off
	96	Reset P/T Fade On
	97-99	Other motor reset
	100-102	Frost Progressive Off
	103-105	Frost Progressive On
	106-108	CMY speed Fast
	109-111	CMY speed Medium
	112-114	CMY speed Slow
	115-255	unused

Appendix

name (=DMX value)	color name
EC003	LAVENDER TINT
EC004	MEDIUM BASTARD AMBER
EC007	PALE YELLOW
EC008	DARK SALMON
EC009	PALE AMBER GOLD
EC010	MEDIUM YELLOW
EC013	STRAW TINT
EC015	DEEP STRAW
EC017	SURPRISE PEACH
EC020	MEDIUM AMBER
EC021	GOLD AMBER
EC022	DARK AMBER
EC024	SCARLET
EC025	SUNSET RED

EC026	BRIGHT RED
EC029	PALSA RED
EC035	LIGHT PINK
EC036	MEDIUM PINK
EC046	DARK MAGENTA
EC048	DARK PURPLE
EC052	LIGHT LAVENDER
EC053	PALE LAVENDER
EC058	LAVENDER
EC063	PALE BLUE
EC068	SKY BLUE
EC071	TOKIO BLUE
EC075	EVENING BLUE
EC079	JUST BLUE
EC085	DEEPER BLUE
EC088	LIME GREEN
EC089	MOSS GREEN
EC090	DARKYELLOW GREEN
EC100	SPRING YELLOW
EC101	YELLOW
EC102	LIGHT AMBER
EC103	STRAW
EC104	DEEP AMBER
EC105	ORANGE
EC106	PRIMAY RED
EC107	LIGHT ROSE
EC108	ENGLISH ROSE
EC109	LIGHT SALMON
EC110	MIDDLE ROSE
EC111	DARK PINK
EC113	MAGENTA
EC116	MEDIUM BLUE GREEN
EC118	LIGHT BLUE
EC119	DARK BLUE
EC120	DEEP BLUE
EC124	DARK GREEN
EC126	MAUVE
EC127	SMOKEY PINK
EC128	BRIGHT PINK
EC132	MEDIUM BLUE
EC134	GOLDEN AMBER
EC136	PALE LAVENDER
EC137	SPECIAL LAVENDER
EC138	PALE GREEN
EC139	PRIMARY GREEN
EC140	SUMMER BLUE
EC141	BRIGHT BLUE
EC142	PALE VIOLET
EC143	PALE NAVY BLUE
EC147	APRICOT
EC148	BRIGHT ROSE
EC151	GOLD TINT

EC152	PALE GOLD
EC153	PALE SALMON
EC154	PALE ROSE
EC156	CHOCOLATE
EC158	DEEP ORANGE
EC159	NO COLOR STRAW
EC161	SLATE BLUE
EC162	BASTARD AMBER
EC164	FLAME RED
EC165	DAYLIGHT BLUE
EC169	LILAC TINT
EC170	DEEP LAVENDER
EC172	LAGOON BLUE
EC174	DARK STEEL BLUE
EC176	LOVING AMBER
EC179	CHROME ORANGE
EC180	DARK LAVENDER
EC181	CONGO BLUE
EC182	LIGHT RED
EC183	MOONLIGHT BLUE
EC192	FLESH PINK
EC193	ROSY AMBER
EC194	SURPRISE PINK
EC195	ZENITH BLUE
EC196	TRUE BLUE
EC197	ALICE BLUE
EC198	PALACE BLUE

12. ERROR MESSAGES

When you turn on the device, it will first perform a reset. The display may show “Err channel is XX” should there be problems with one or more functions. “XX” stands for channel 1, 2, 3, 4, 5, 6 etc whose sensor has encountered a problem. For example, when the display shows “Err channel is Pan movement”, it means there is an error on channel 1. If there are errors on channel 1, channel 3, channel 6 at the same time, you may see the error message, “Err channel is Pan movement”, “Err channel is Tilt movement” “Err channel is Shutter”, flash twice, and then the device will generate a second reset. If the error messages persist after performing a reset more than twice, the channels which have errors may not work properly however, all other functions can work as usual. Please contact your dealer or manufacturer for service. Self repair is not allowed.

PAN- movement Er

(PAN- yoke movement error) This message will appear after the reset of the fixture if the yoke’s magnetic-indexing circuit malfunction (Optical Sensor or Magnetic Sensor fails) or the stepper motor is defective (or its driving IC on the main PCB). The PAN- movement is not located in the default position after the reset.

TILT- movement Er

(TILT- head movement error) This message will appear after the reset of the fixture if the head’s magnetic-indexing circuit malfunctions ((Optical Sensor or Magnetic Sensor fails)) or the stepper motor is defective (or its driving IC on the main PCB). The TILT- movement is not located in the default position after the reset.

Zoom wheel Er

(Zoom wheel error) This message will appear after the reset of the fixture if the head’s magnetic-indexing circuit malfunctions (Optical Sensor or Magnetic Sensor fails) or the stepper motor is defective (or its driving IC on the main PCB). The Zoom - movement is not located in the default position after the reset.

Focus wheel Er

(Focus wheel error) This message will appear after the reset of the fixture if the head’s magnetic-indexing circuit malfunctions (Optical Sensor or Magnetic Sensor fails) or the stepper motor is defective (or its driving IC on the main PCB). The Focus - movement is not located in the default position after the reset.

Color wheel Er

(Color wheel- error) This message will appear after the reset of the fixture if the head’s magnetic-indexing circuit malfunctions (sensor failed or magnet missing) or the stepper motor is defective (or its driving IC on the main PCB). The Color - movement is not located in the default position after the reset.

Cyan Color wheel Er

(Cyan Color wheel- error) This message will appear after the reset of the fixture if the head’s magnetic-indexing circuit malfunctions (sensor failed or magnet missing) or the stepper motor is defective (or its driving IC on the main PCB). The CMY - movement is not located in the default position after the reset.

Magenta Color wheel Er

(Magenta Color wheel- error) This message will appear after the reset of the fixture if the head’s magnetic-indexing circuit malfunctions (sensor failed or magnet missing) or the stepper motor is defective (or its driving IC on the main PCB). The CMY - movement is not located in the default position after the reset.

Yellow Color wheel Er

(Yellow Color wheel- error) This message will appear after the reset of the fixture if the head's magnetic-indexing circuit malfunctions (sensor failed or magnet missing) or the stepper motor is defective (or its driving IC on the main PCB).The CMY - movement is not located in the default position after the reset.

CTO wheel Er

(CTO wheel- error) This message will appear after the reset of the fixture if the head's magnetic-indexing circuit malfunctions (sensor failed or magnet missing) or the stepper motor is defective (or its driving IC on the main PCB).The CTO - movement is not located in the default position after the reset.

CTB wheel Er

(CTB wheel- error) This message will appear after the reset of the fixture if the head's magnetic-indexing circuit malfunctions (sensor failed or magnet missing) or the stepper motor is defective (or its driving IC on the main PCB).The CTB - movement is not located in the default position after the reset.

CTP wheel Er

(CTP wheel- error) This message will appear after the reset of the fixture if the head's magnetic-indexing circuit malfunctions (sensor failed or magnet missing) or the stepper motor is defective (or its driving IC on the main PCB).The CTP - movement is not located in the default position after the reset.

Rot_Gobo wheel Er

(Rot_Gobo wheel - error) This message will appear after the reset of the fixture if the head's magnetic-indexing circuit malfunctions (sensor failed or magnet missing) or the stepper motor is defective (or its driving IC on the main PCB).The Rot_Gobo - movement is not located in the default position after the reset.

Animation wheel Er

(Animation wheel - error) This message will appear after the reset of the fixture if the head's magnetic-indexing circuit malfunctions (sensor failed or magnet missing) or the stepper motor is defective (or its driving IC on the main PCB).The Animation - movement is not located in the default position after the reset.

Iris wheel Er

(Iris wheel - error) This message will appear after the reset of the fixture if the head's magnetic-indexing circuit malfunctions (sensor failed or magnet missing) or the stepper motor is defective (or its driving IC on the main PCB).The Iris - movement is not located in the default position after the reset.

Prism 1 wheel Er

(Prism 1 wheel- error) This message will appear after the reset of the fixture if the head's magnetic-indexing circuit malfunctions (sensor failed or magnet missing) or the stepper motor is defective (or its driving IC on the main PCB).The Prism 1 - movement is not located in the default position after the reset.

Prism 2 wheel Er

(Prism 2 wheel- error) This message will appear after the reset of the fixture if the head's magnetic-indexing circuit malfunctions (sensor failed or magnet missing) or the stepper motor is defective (or its driving IC on the main PCB).The Prism 2 - movement is not located in the default position after the reset.

Blade 1 wheel Er

(Blade 1 wheel - error) This message will appear after the reset of the fixture if the head's magnetic-indexing circuit malfunctions (sensor failed or magnet missing) or the stepper motor is defective (or its driving IC on the main PCB).The Blade 1 - movement is not located in the default position after the reset.

Blade 1_Rot wheel Er

(Blade 1_Rot wheel - error) This message will appear after the reset of the fixture if the head's magnetic-indexing circuit malfunctions (sensor failed or magnet missing) or the stepper motor is defective (or its driving IC on the main PCB).The Blade 1_Rot - movement is not located in the default position after the reset.

Blade 2 wheel Er

(Blade 2 wheel - error) This message will appear after the reset of the fixture if the head's magnetic-indexing circuit malfunctions (sensor failed or magnet missing) or the stepper motor is defective (or its driving IC on the main PCB).The Blade 2 - movement is not located in the default position after the reset.

Blade 2_Rot wheel Er

(Blade 2_Rot wheel - error) This message will appear after the reset of the fixture if the head's magnetic-indexing circuit malfunctions (sensor failed or magnet missing) or the stepper motor is defective (or its driving IC on the main PCB).The Blade 2_Rot - movement is not located in the default position after the reset.

Blade 3 wheel Er

(Blade 3 wheel - error) This message will appear after the reset of the fixture if the head's magnetic-indexing circuit malfunctions (sensor failed or magnet missing) or the stepper motor is defective (or its driving IC on the main PCB).The Blade 3 - movement is not located in the default position after the reset.

Blade 3_Rot wheel Er

(Blade 3_Rot wheel - error) This message will appear after the reset of the fixture if the head's magnetic-indexing circuit malfunctions (sensor failed or magnet missing) or the stepper motor is defective (or its driving IC on the main PCB).The Blade 3_Rot - movement is not located in the default position after the reset.

Blade 4 wheel Er

(Blade 4 wheel - error) This message will appear after the reset of the fixture if the head's magnetic-indexing circuit malfunctions (sensor failed or magnet missing) or the stepper motor is defective (or its driving IC on the main PCB).The Blade 4 - movement is not located in the default position after the reset.

Blade 4_Rot wheel Er

(Blade 4_Rot wheel - error) This message will appear after the reset of the fixture if the head's magnetic-indexing circuit malfunctions (sensor failed or magnet missing) or the stepper motor is defective (or its driving IC on the main PCB).The Blade 4_Rot - movement is not located in the default position after the reset.

All_Blade_Rot wheel Er

(All_Blade_Rot wheel - error) This message will appear after the reset of the fixture if the head's magnetic-indexing circuit malfunctions (sensor failed or magnet missing) or the stepper motor is defective (or its driving IC on the main PCB).The All_Blade_Rot - movement is not located in the default position after the reset.

Frost wheel Er

(Frost wheel - error) This message will appear after the reset of the fixture if the head's magnetic-indexing circuit malfunctions (sensor failed or magnet missing) or the stepper motor is defective (or its driving IC on the main PCB).The Frost - movement is not located in the default position after the reset.

Animation_Rot wheel Er

(Animation_Rot wheel - error) This message will appear after the reset of the fixture if the head's magnetic-indexing circuit malfunctions (sensor failed or magnet missing) or the stepper motor is defective (or its driving IC on the main PCB).The Animation_Rot - movement is not located in the default position after the reset.

13. CLEANING AND MAINTENANCE

The following points have to be considered during inspection:

- 1) All screws for installing the devices or parts of the device have to be tightly connected and must not be corroded.
 - 2) There must not be any deformations to the housing, lenses, rigging and installation points (ceiling, suspension, trussing).
 - 3) Motorized parts must not show any signs of wear and must move smoothly without issue.
 - 4) The power supply cables must not show any damage, material fatigue or sediment.
- Further instructions depending on the installation location and usage have to be adhered to by a qualified installer and any safety concerns have to be removed.



CAUTION!
DISCONNECT FROM MAINS BEFORE STARTING MAINTENANCE OPERATION.

In order to ensure the device remains in good condition and does not fail prematurely, we suggest regular maintenance.


- 1) Clean the inside and outside lens each week to avoid loss of output due to accumulation of dust/ dirt on the lens.
- 2) Clean the fans each week to ensure maximum airflow and efficient thermal cooling. This will ensure the light source is operated in the best possible condition.
- 3) A detailed electrical check by an approved electrician every quarter to make sure that the circuit contacts are in good condition. This will prevent poor circuit contacts and the resultant overheating.

We recommend frequent cleaning of the device. Please use a moist, lint-free cloth. Never use alcohol or solvents.

Please refer to the instructions under "Installation instructions".

Should you need any spare parts, please order genuine parts from your local dealer.

Remark: Errors and omissions for all information given in this manual are excepted. All information is subject to change without prior notice.

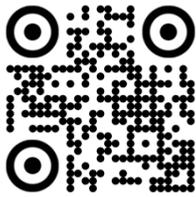

scan for more on
www.ayrton.eu



AYRTON
Digital Lighting

2 Rue de Vitruve - 91140 - Villebon-sur-Yvette - France